



AQ-110P SS:0a

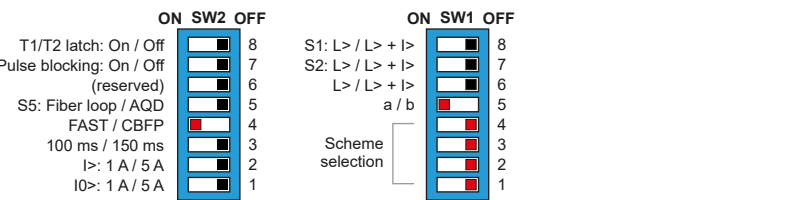

SS:0a		OUTPUTS						
INPUTS	T1	T3	T4	BO1	HSO1	HSO2	AQD	
	S1	x ¹	x ¹	x ¹			x ¹	x ²
	S2	x ¹	x ¹	x ¹			x ¹	x ²
	S3,S4,S5	x ¹	x ¹	x ¹			x ¹	x ²
	Lext> (BI2)	x ¹	x ¹	x ¹			x ¹	x ²
	Iext> (BI1)					x		
I> (phase currents)					x	x		
IO> (residual current)					x	x		

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, IO> or BI1) is ON.
- 2) Activates only if phase overcurrent signal (I>) or external current (BI1) is ON.

AQ-101 SS:0

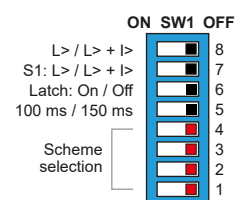

SS:0		OUTPUTS				
INPUT	T1	T2	T3	T4	BO1	
	S1 - S5	x ¹	x ¹	x ¹	x ¹	x
	Lext> (BI2)	x ¹	x ¹	x ¹	x ¹	

- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

