



AQ-110P SS:0a

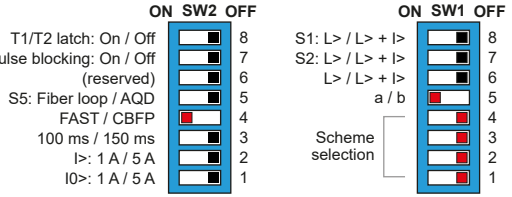

SS:0a		OUTPUTS				
INPUTS	S1	T1	T4	HSO1	HSO2	AQD
	S1	x ¹	x ¹		x ¹	x ²
	S2	x ¹	x ¹		x ¹	x ²
	S3,S4,S5	x ¹	x ¹		x ¹	x ²
	Lext> (BI2)	x ¹	x ¹		x ¹	x ²
	Iext> (BI1)			x		
	I> (phase currents)			x		
	I0> (residual current)			x		

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, I0> or BI1) is ON.
- 2) Activates only if phase overcurrent signal (I>) is ON.


AQ-110P SS:4a

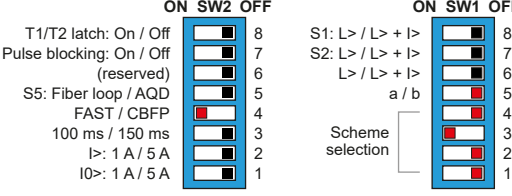

SS:4b		OUTPUTS			
INPUTS	S1	T1	T4	BO1	HSO1
	S1	x ¹	x ¹	x ¹	
	S2	x ¹	x ¹	x	
	S3,S4,S5	x ¹	x ¹	x	
	Master trip (BI1)	x	x		
	I> (phase currents)				x
	I0> (residual current)				x

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, I0> or BI2) is ON.

AQ-101 SS:0

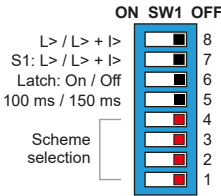

SS:0		OUTPUTS				
INPUTS	S1 - S5	T1	T2	T3	T4	BO1
	S1 - S5	x ¹	x ¹	x ¹	x ¹	x
	Lext> (BI2)	x ¹	x ¹	x ¹	x ¹	

- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

