



AQ-110P SS:2a

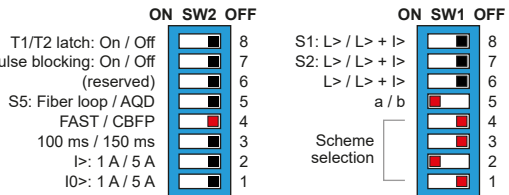

INPUTS	SS:2a				
	S1	S2	S3	S4	S5
T1	x ¹	x ¹			
T2	x ¹	x ¹			
HSO1					
HSO2					
AQD					

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, I> or BI1) is ON.
- 2) Activates only if phase overcurrent signal (I>) is ON.


AQ-110P SS:4a

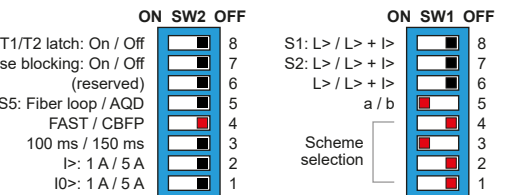

INPUTS	SS:4a				
	S1	S2	S3	S4	S5
T1	x ¹	x ¹			
T2	x ¹	x ¹			
BO1					
HSO1					
AQD					

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, I> or BI2) is ON.
- 2) Activates only if any overcurrent signal (I>, I> or BI2) is ON.


AQ-103 SS:4

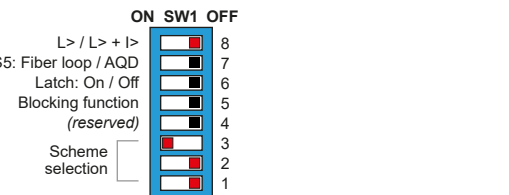


INPUTS	SS:4				
	S1	S2	S3	S4	S5
T1	x ¹	x ¹			
T2	x ¹	x ¹			
T3					
T4					
BO1					
HSO1					
AQD					

- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

Master incoming feeder AQ-110P SS:2a

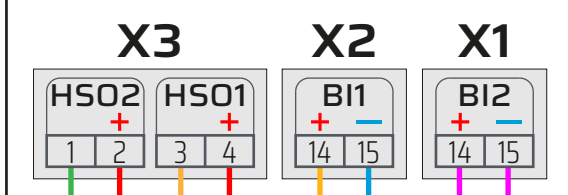

Follower incoming feeders AQ-110P SS:4a

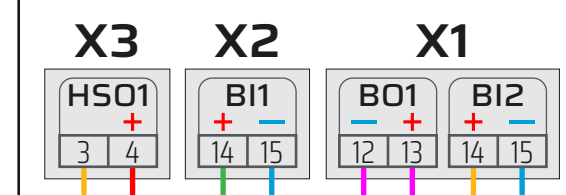

Outgoing feeders AQ-103 SS:4

