



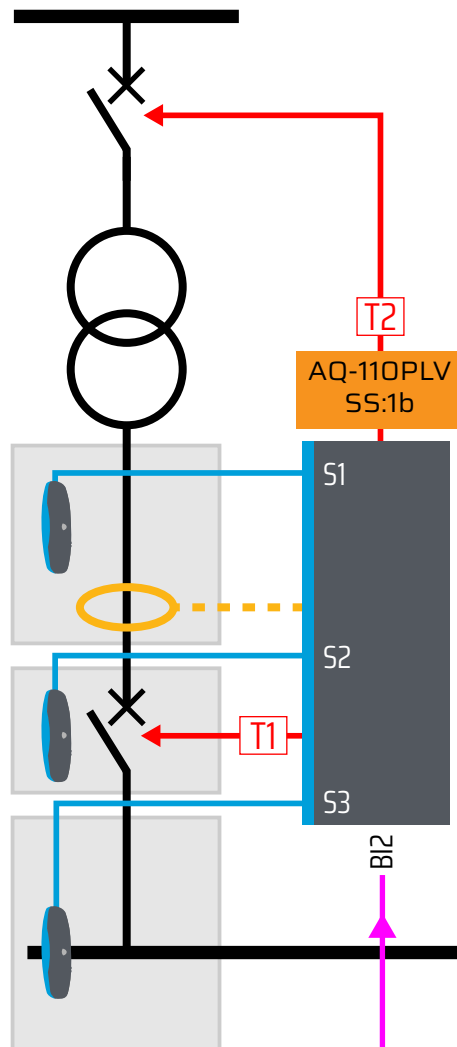


AQ-110PLV SS:1b

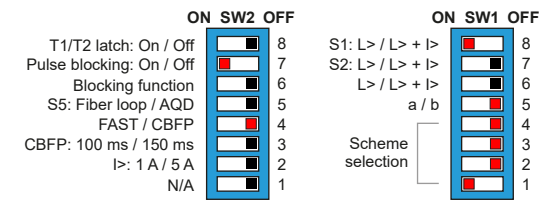

SS:1b		OUTPUTS			
INPUTS	S1	T1	T2	T4	AQD
	S1	x ¹	x ¹	x ¹	
	S2	x ¹	x ¹	x ¹	x ²
	S3, S4, S5	x ¹	CBFP ¹	x ¹	x ²
Lext> AQ-103LV (BI2)		x ¹	CBFP ¹	x ¹	x ²

- 1) Activates only if channel has been set to light only mode or phase overcurrent signal (I>) is ON.
- 2) Activates only if phase overcurrent signal (I>) is ON.

AQ-103LV SS:0

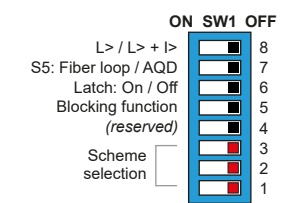


SS:0		OUTPUTS				
INPUTS	S1 - S15	T1	T2	T3	T4	BO1
	S1 - S15	x ¹	x ¹	x ¹	x ¹	x

- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

Incoming feeder AQ-110PLV SS:1b

Outgoing feeders AQ-103LV SS:0

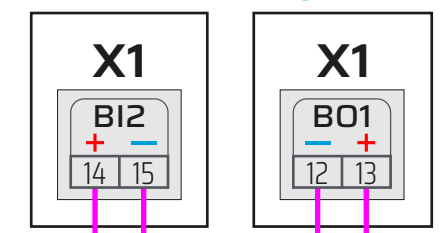

AQ-103LV Light + -

