


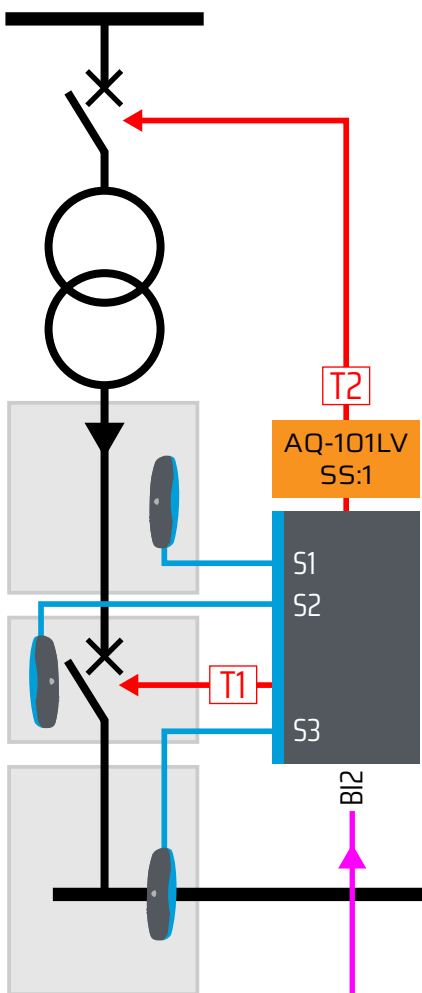

AQ-101LV SS:1

ON SW1 OFF

L> / L> + I>
S1: L> / L> + I>
Latch: On / Off
Block

Scheme selection

8
7
6
5
4
3
2
1

SS:1		OUTPUTS	
INPUTS	S1	T1	T2
	S2	x ¹	x ¹
	S3 - S5	x ¹	
	Lex> (BI2)	x ¹	

- 1) Activates only if channel has been set to light only mode or phase overcurrent signal (BI1) is ON.

AQ-101LV SS:0

ON SW1 OFF

L> / L> + I>
S1: L> / L> + I>
Latch: On / Off
Block


Scheme selection

8
7
6
5
4
3
2
1


SS:0		OUTPUTS				
INPUTS	S1 - S5	T1	T2	T3	T4	BO1
		x ¹	x ¹	x ¹	x ¹	x

- 1) Activates only if channel has been set to light only mode or phase overcurrent signal (BI1) is ON.

Incoming feeder AQ-101LV SS:1

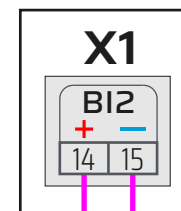

Outgoing feeders AQ-101LV SS:0

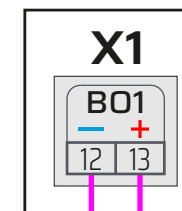

Light signal +
-



Light

