



AQ-103LV SS:1

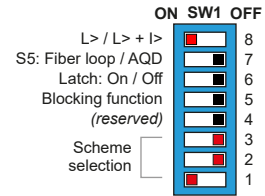

SS:1		OUTPUTS		
INPUTS	S1 - S2	T1	T2	AQD
	S3 - S15	x ¹	x ¹	x ²
	Lex> (BI2)	x ¹	x ¹	x ²

- 1) Activates only if channel has been set to light only mode or phase overcurrent signal (BI1) is ON.
- 2) Activates only if phase overcurrent signal (BI1) is ON.


AQ-103LV SS:0

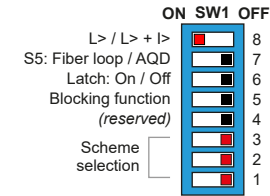

SS:0		OUTPUTS				
INPUTS	S1 - S15	T1	T2	T3	T4	BO1
		x ¹	x ¹	x ¹	x ¹	x

- 1) Activates only if channel has been set to light only mode or phase overcurrent signal (BI1) is ON.

Incoming feeder Outgoing feeders AQ-103LV SS:1 AQ-103LV SS:0

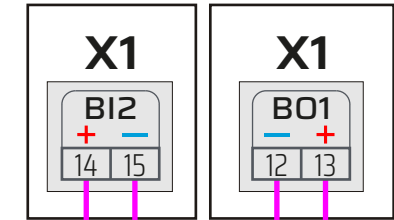

Light signal + -

