



AQ-110P SS:2a

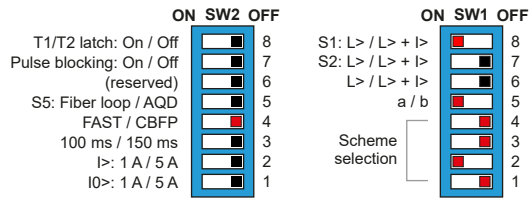

SS:2a	T1	T2	T3	BO1	HSO1	HSO2	AQD
S1	x ¹	x ¹	CBFP ¹			CBFP ¹	
S2	x ¹	x ¹	x ¹			x ¹	x ²
S3,S4,S5	x ¹	CBFP ¹	x ¹			x ¹	x ²
Lext> (BI2)	x ¹	CBFP ¹	x ¹				
Lext> (BI1)							
I> (phase currents)				x	x		
I0> (residual current)				x	x		

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, I0> or BI1) is ON.
- 2) Activates only if phase overcurrent signal (I>) is ON.

AQ-110P SS:7a

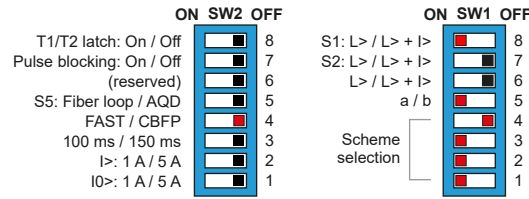

SS:7a	T1	T2	HSO2	BO1
S1	x ¹	x ¹		CBFP ¹
S2	x ¹	x ¹		x
S3,S4,S5	x ¹	CBFP ¹		x
Master trip (BI1)	x	CBFP ¹		
Lext> (BI2)			x	
I> (phase currents)			x	
I0> (residual current)			x	

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, I0> or BI1) is ON.

AQ-101 SS:4



SS:4	T1	T2	BO1
S1	x ¹		CBFP
S2		x ¹	CBFP
S3, S4, S5			x
Master Trip (BI2)	x	x	

- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

