


AQ-110P SS:2a



SS:0a	T1	T3	T4	BO1	HSO1	HSO2	AQD
S1	x ¹	x ¹	x ¹			x ¹	x ²
S2	x ¹	x ¹	x ¹			x ¹	x ²
S3,S4,S5	x ¹	x ¹	x ¹			x ¹	x ²
Lex> (BI1)	x ¹	x ¹	x ¹			x ¹	x ²
Lex> (BI2)							
I> (phase currents)				x	x		
I0> (residual current)				x	x		


- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, I0> or BI1) is ON.
- 2) Activates only if phase overcurrent signal (I>) or external current (BI1) is ON.

AQ-110P SS:7a

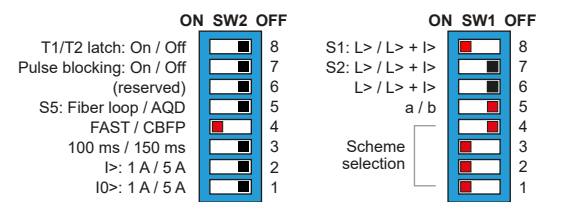


SS:7a	T1	T4	HSO2	BO1
S1	x ¹	x ¹		
S2	x ¹	x ¹		x
S3,S4,S5	x ¹	x ¹		
Master trip (BI1)	x	x		
Lex> (BI2)				
I> (phase currents)			x	
I0> (residual current)			x	

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, I0> or BI1) is ON.

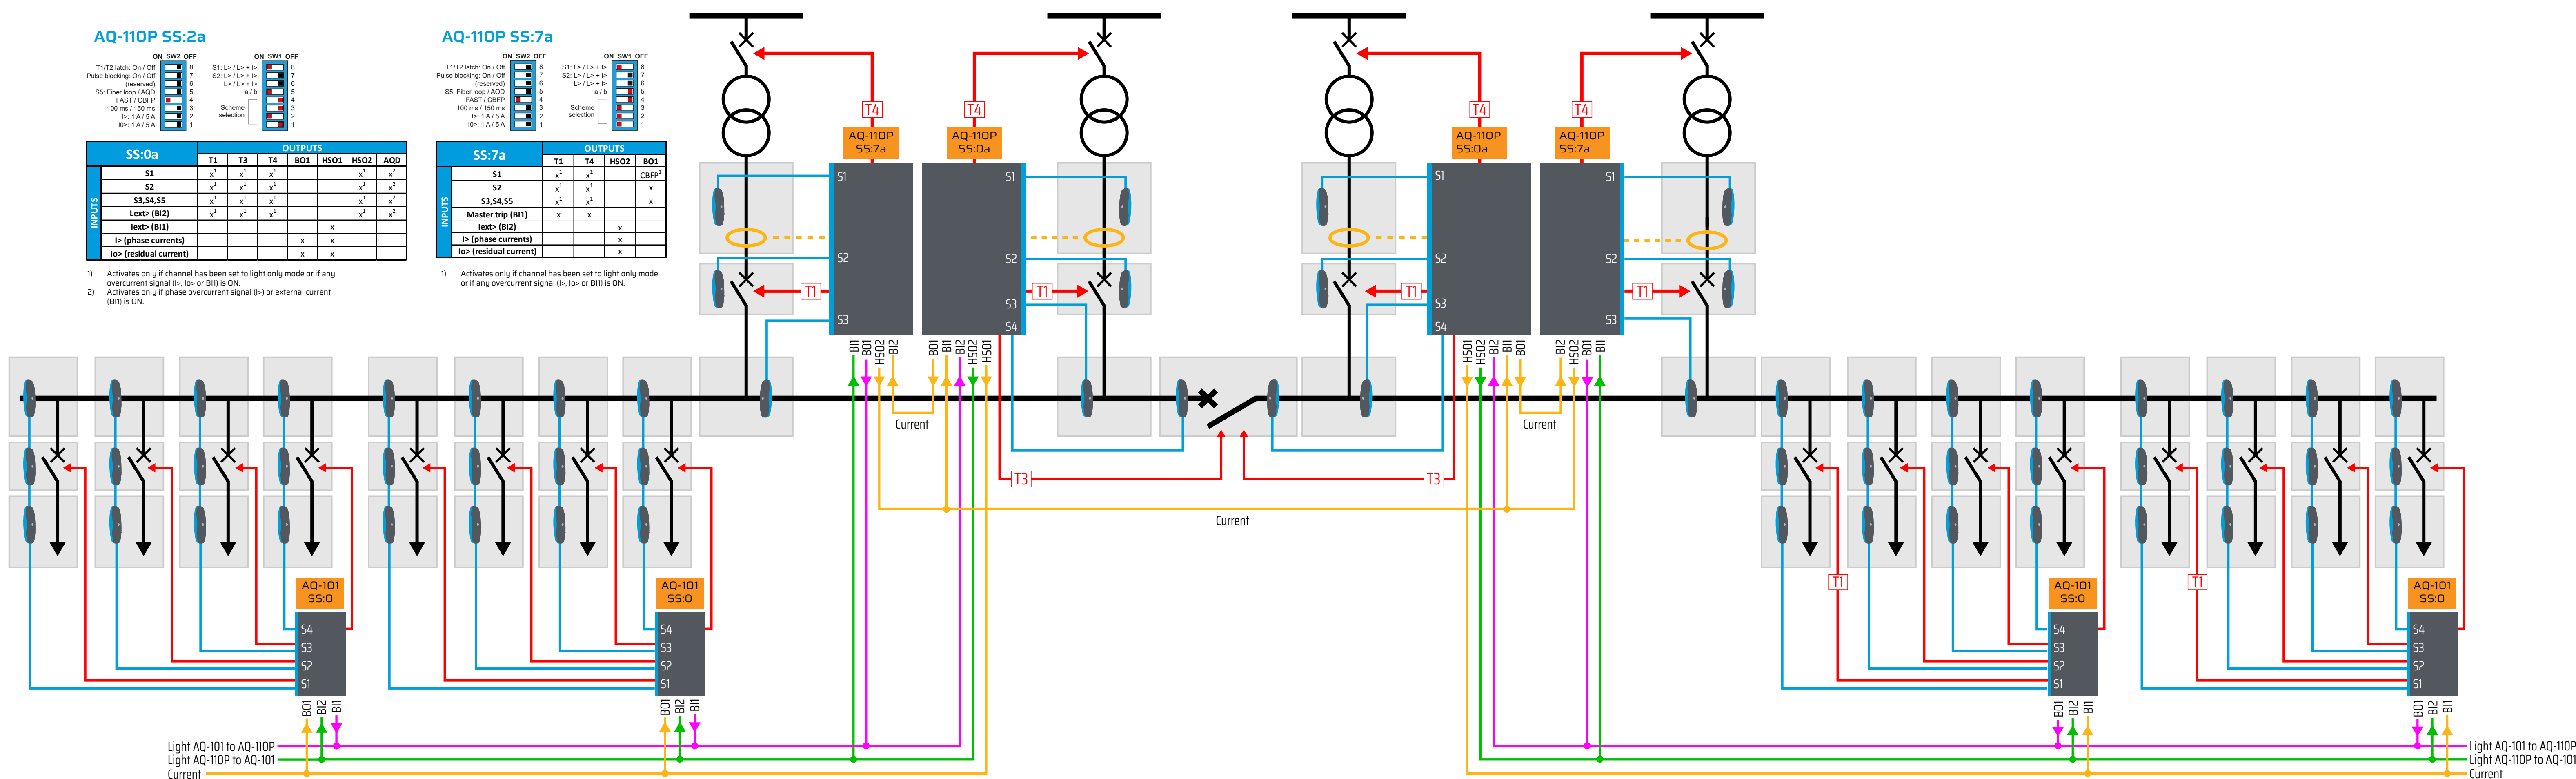

AQ-101 SS:0

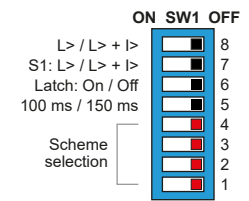

SS:0	T1	T2	T3	T4	BO1
S1 - S5	x ¹	x ¹	x ¹	x ¹	x
Lex> (BI2)	x ¹	x ¹	x ¹	x ¹	

- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

