



AQ-110P SS:2a

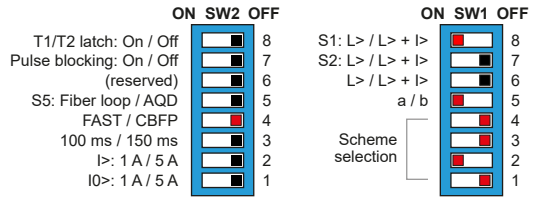

SS:2a		OUTPUTS				
INPUTS	S1	T1	T2	HSO1	HSO2	AQD
	S1	x ¹	x ¹		CBFP ¹	
	S2	x ¹	x ¹		x ¹	x ²
	S3,S4,S5	x ¹	CBFP ¹		x ¹	x ²
	Text> (BI2)	x ¹	CBFP ¹		x ¹	x ²
	Text> (BI1)			x		
I> (phase currents)				x		
I0> (residual current)				x		

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, I0> or BI1) is ON.
- 2) Activates only if phase overcurrent signal (I>) is ON.


AQ-110P SS:4a

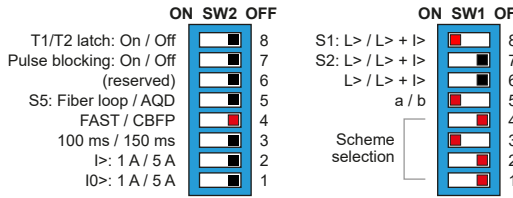

SS:4a		OUTPUTS			
INPUTS	S1	T1	T2	BO1	HSO1
	S1	x ¹	x ¹	CBFP ¹	
	S2	x ¹	x ¹	x	
	S3,S4,S5	x ¹	CBFP ¹	x	
	Master trip (BI1)	x	CBFP ²		
	I> (phase currents)				x
I0> (residual current)					x


- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, I0> or BI2) is ON.
- 2) Activates only if any overcurrent signal (I>, I0> or BI2) is ON.

AQ-101 SS:4

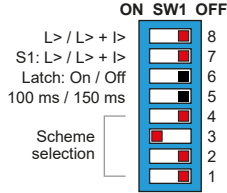


SS:4		OUTPUTS		
INPUTS	S1	T1	T2	BO1
	S1	x ¹		CBFP
	S2		x ¹	CBFP
	S3, S4, S5			x
Master Trip (BI2)		x	x	


- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

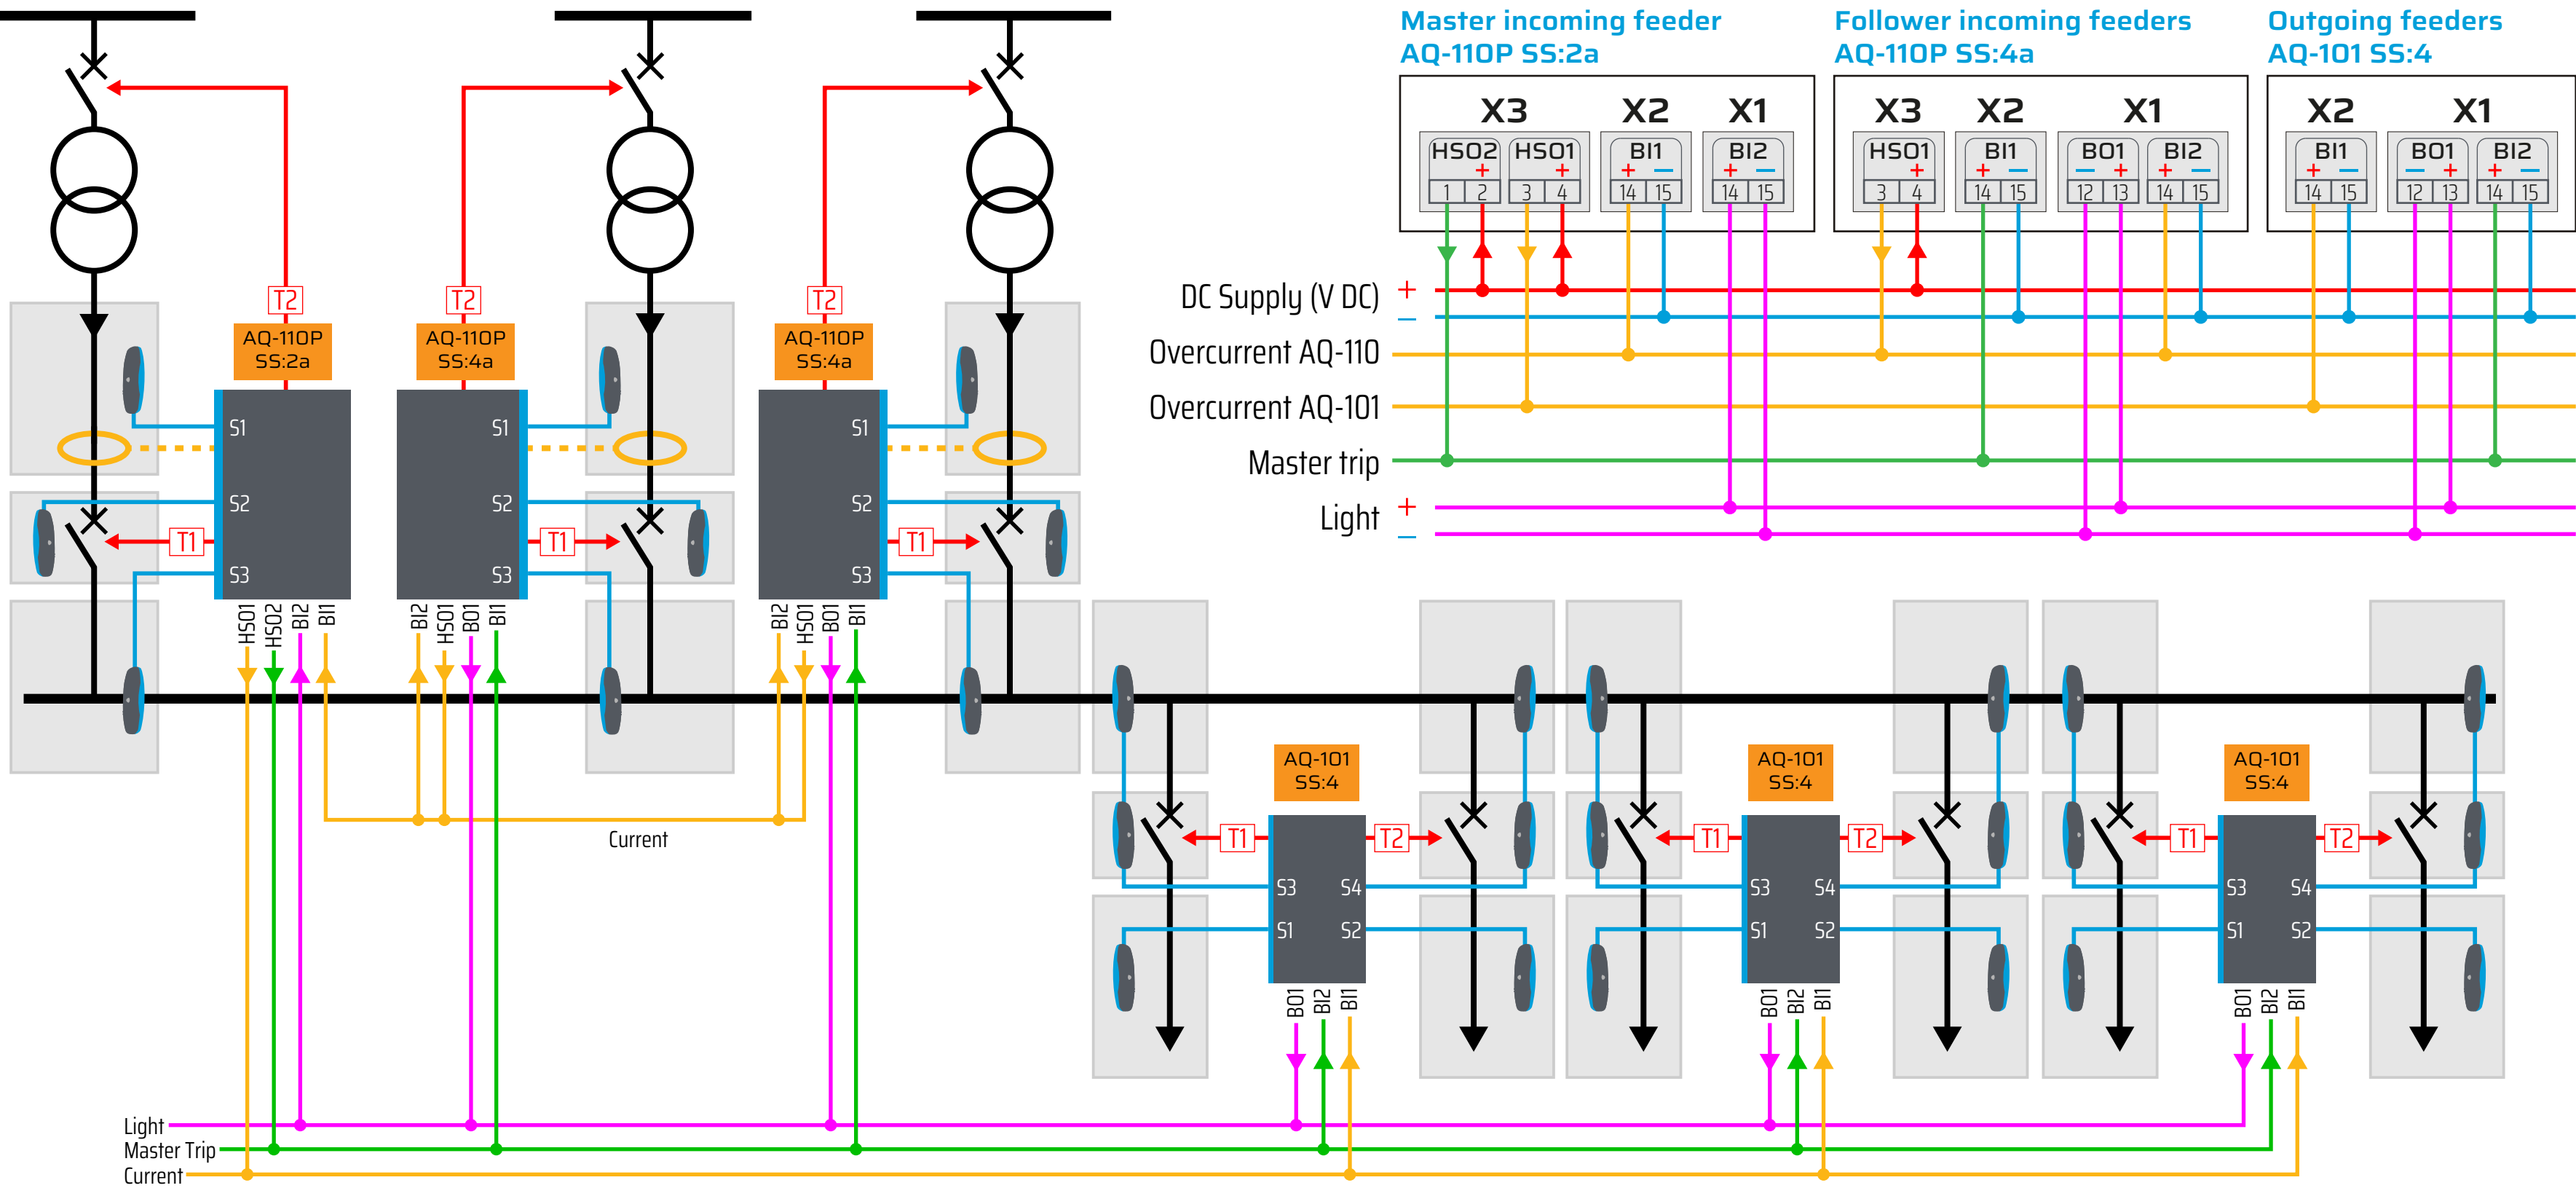

Master incoming feeder
AQ-110P SS:2a

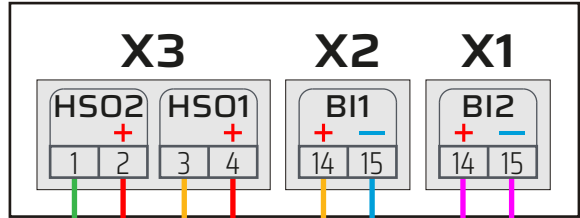

Follower incoming feeders
AQ-110P SS:4a

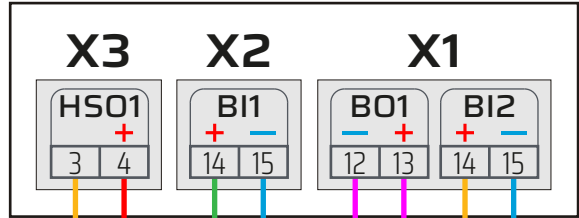

Outgoing feeders
AQ-101 SS:4

