



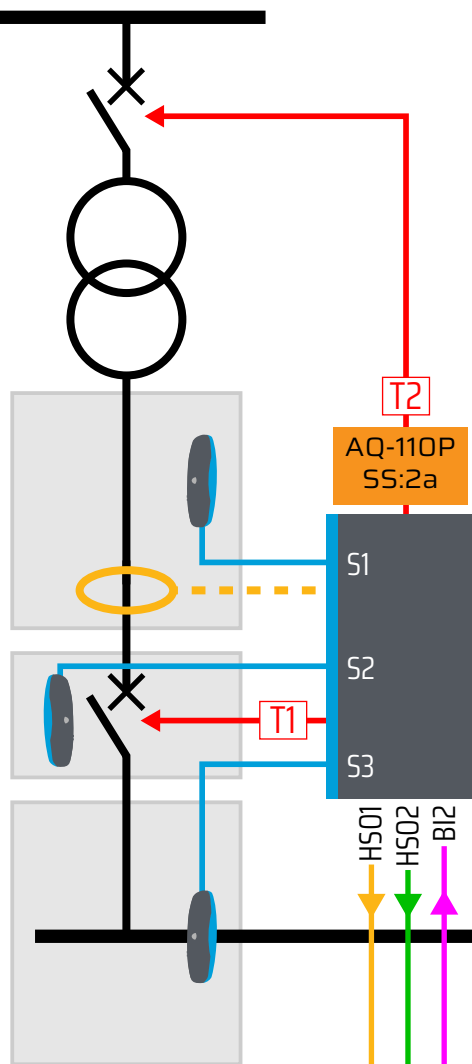


AQ-110P SS:2a

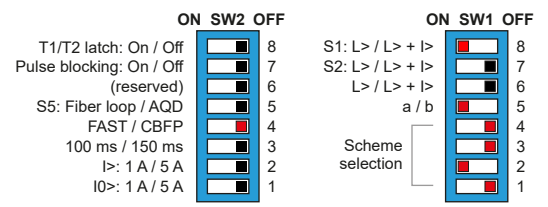


SS:2a		OUTPUTS				
INPUTS		T1	T2	HSO1	HSO2	AQD
	S1	x ¹	x ¹		CBFP ¹	
	S2	x ¹	x ¹		x ¹	x ²
	S3,S4,S5	x ¹	CBFP ¹		x ¹	x ²
	Lext> (BI2)	x ¹	CBFP ¹		x ¹	x ²
	I> (phase currents)			x		
	Io> (residual current)			x		

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I> or Io>) is ON.
- 2) Activates only if phase overcurrent signal (I>) is ON.

Incoming feeder AQ-110P SS:2a

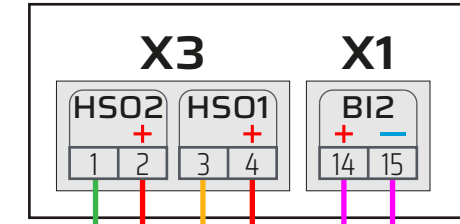

Outgoing feeders AQ-101 SS:1

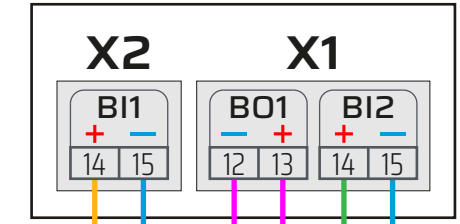


DC Supply (V DC) + -


Master trip + -

Overcurrent + -

L> + -

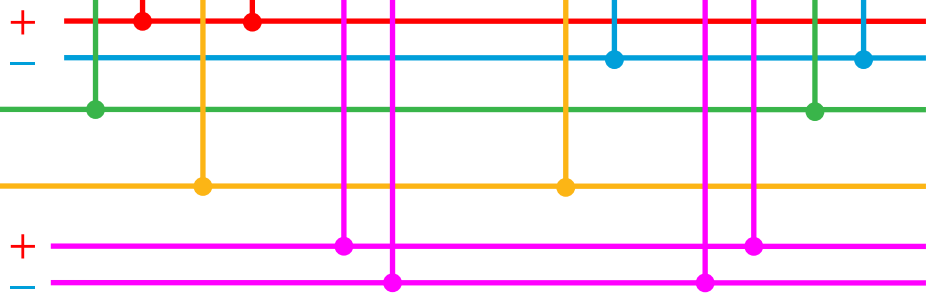

AQ-101 SS:1

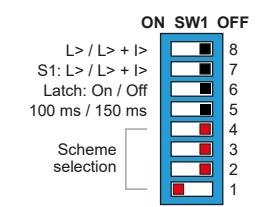

SS:1		OUTPUTS	
INPUTS		T1	BO1
	S1	x ¹	CBFP
	S2 - S5		x
	Master Trip (BI2)	x	

- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

Light
Master Trip
Current

