



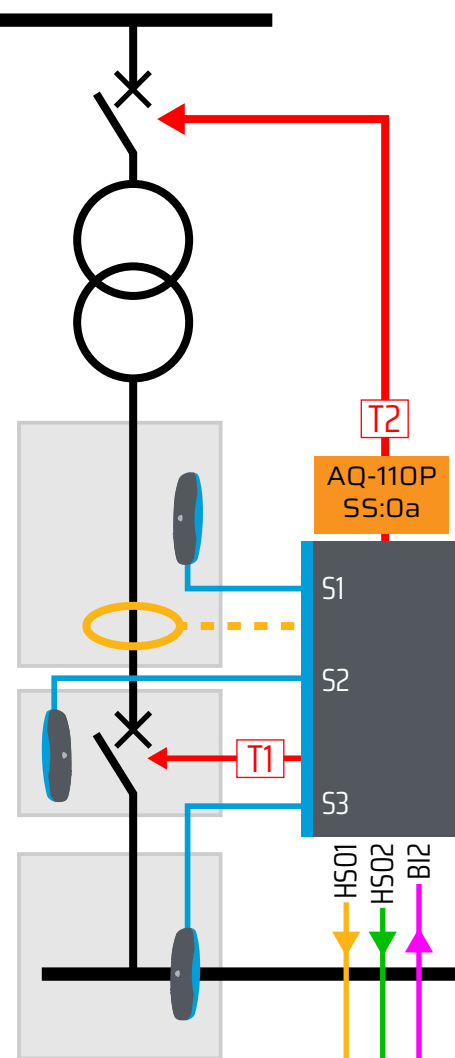


AQ-110P SS:0a

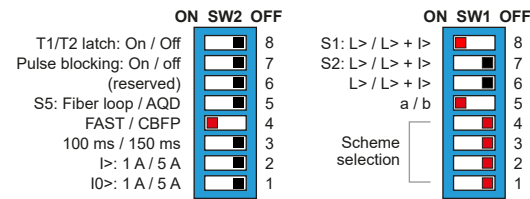

SS:0a		OUTPUTS				
INPUTS	S1	x ¹	x ¹		x ¹	x ²
	S2	x ¹	x ¹		x ¹	x ²
	S3,S4,S5	x ¹	x ¹		x ¹	x ²
	Lext> (BI2)	x ¹	x ¹		x ¹	x ²
	I> (phase currents)			x		
	I0> (residual current)			x		

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I> or I0>) is ON.
- 2) Activates only if phase overcurrent signal (I>) is ON.


AQ-101 SS:0

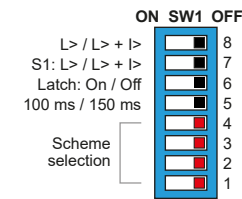


SS:0		OUTPUTS				
INPUT	S1 - S5	x ¹	x ¹	x ¹	x ¹	x
	Lext> (BI2)	x ¹	x ¹	x ¹	x ¹	

- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

Incoming feeder AQ-110P SS:2a

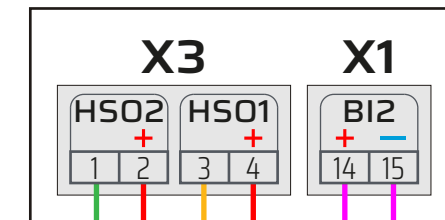

Outgoing feeders AQ-101 SS:0

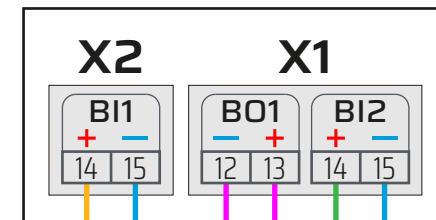

DC Supply (V DC)

Light to AQ-101

Overcurrent

Light to AQ-110P

Light to AQ-110

Light to AQ-101

Current