

AQ-101(D)

Arc flash protection device

Instruction manual

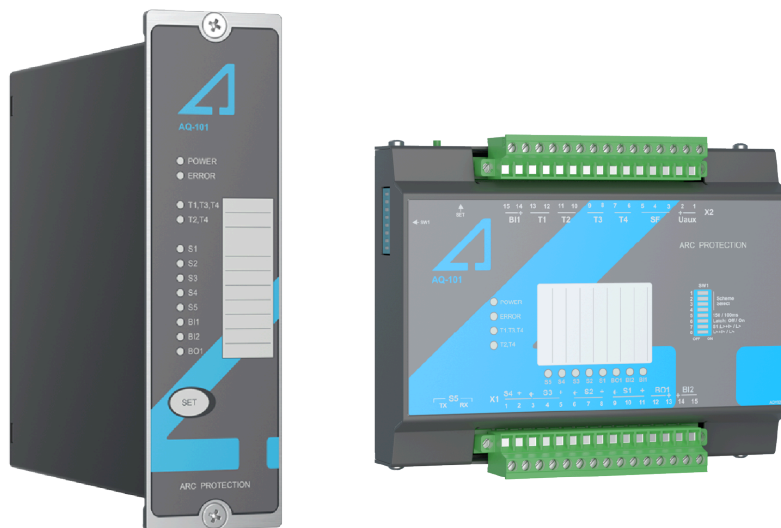


Table of contents

1 Document information	4
2 Safety information	6
3 Abbreviations	7
4 General	8
5 Device features	9
6 Connections	10
6.1 Inputs	12
6.1.1 Arc sensor channels	12
6.1.2 Binary inputs	12
6.2 Outputs	13
6.2.1 Binary outputs	13
6.2.2 Trip relays	13
6.2.3 System failure relay	14
6.3 Auxiliary voltage	14
7 Arc sensors	15
7.1 Arc light point sensor AQ-01	15
7.2 Arc light and pressure point sensor AQ-02	16
7.3 Arc light fiber optic loop sensor AQ-06	16
7.4 Arc light fiber optic loop sensor AQ-07	17
7.5 Arc light fiber optic loop sensor AQ-08	17
7.6 Sensor dependencies	17
7.7 Wiring of point sensors	18
7.8 Using the sensor bracket	19
8 Operation and configuration	20
8.1 DIP switch settings	20
8.2 Logic schemes	21
8.2.1 SS:0 Non-selective arc protection	22
8.2.2 SS:1 One outgoing feeder per device	24
8.2.3 SS:4 Two outgoing feeders per device	26
8.3 Push button (SET)	27
8.3.1 System setup (auto-configuration)	28
8.3.2 Reset	28
8.3.3 Input connection check	28
8.4 Circuit breaker failure protection	28
8.5 LED indicator functions	28
8.6 LED operations guide	29
8.7 Non-volatile memory	30
9 System self-supervision	31
10 Dimensions and installation	32
11 Testing	39
11.1 Testing the light-only mode	39
11.2 Testing the light and current mode	39
11.3 Testing the CBFP function	40
11.4 Testing the operation time	40
11.5 Test plan example	41
12 Troubleshooting	42
13 Technical data	43
13.1 Mounting and installation	43

13.2 Operating times	44
13.3 Auxiliary voltage.....	44
13.4 Binary inputs.....	44
13.5 Trip relays	44
13.6 Binary output(s)	45
13.7 System failure relay	45
13.8 Point sensors	45
13.9 Fiber optic loop sensors	46
13.10 Disturbance tests.....	47
13.11 Voltage tests.....	47
13.12 Mechanical tests.....	48
13.13 Environmental conditions	48
13.14 Casing.....	48
14 Ordering information	49
15 Contact and reference information.....	51

Disclaimer

Please read these instructions carefully before using the equipment or taking any other actions with respect to the equipment. Only trained and qualified persons are allowed to perform installation, operation, service or maintenance of the equipment. Such qualified persons have the responsibility to take all appropriate measures, including e.g. use of authentication, encryption, anti-virus programs, safe switching programs etc. necessary to ensure a safe and secure environment and usability of the equipment. The warranty granted to the equipment remains in force only provided that the instructions contained in this document have been strictly complied with.

Nothing contained in this document shall increase the liability or extend the warranty obligations of the manufacturer Arcteq Relays Ltd. The manufacturer expressly disclaims any and all liability for any damages and/or losses caused due to a failure to comply with the instructions contained herein or caused by persons who do not fulfil the aforementioned requirements. Furthermore, the manufacturer shall not be liable for possible errors in this document.

Please note that you must always comply with applicable local legislation and regulations. The manufacturer gives no warranties that the content of this document is in all respects in line with local laws and regulations and assumes no liability for such possible deviations.

You are advised to notify the manufacturer in case you become aware of any errors in this document or of defects in the equipment.

The manufacturer reserves the right to update or amend this document at any time.

Copyright

Copyright © Arcteq Relays Ltd. 2026. All rights reserved.

1 Document information

Table. 1 - 1. History of Revision 1.

Revision	1.00
Date	October 2010
Changes	- The first revision of the manual.
Revision	1.01
Date	June 2011
Changes	- Sensor chapter revised. - DIP switch definition updated. - "Dimensions and installation" chapter edited: the depth of the unit is changed from 170 mm to 175 mm.
Revision	1.02
Date	May 2012
Changes	- One selective scheme and the non-selective scheme are updated. - DIP switch definition is changed to scheme selection. - AQ-101 DIN rail version added.
Revision	1.03
Date	November 2012
Changes	- AQ-101 simplified block diagram revised: the name of the BI2 on X1 connector is corrected.

Table. 1 - 2. History of Revision 2.

Revision	2.00
Date	October 2020
Changes	- Content completely rewritten to improve grammar and readability. - The "Available logic schemes" chapter updated. - The AQ-02 point sensor chapter added to the "Arc sensors" chapter, and AQ-02's technical data added to the "Technical data" chapter. - The sensor-type dependency list updated. - The original "Connecting sensors" chapter moved to the AQ-0x instruction booklet, and replaced with a summary of how to connect point sensors. A summary of connecting fiber sensors also added to the chapter. - All technical data checked and updated where necessary. - Ordering information updated. - Images updated where necessary.
Revision	2.01
Date	November 2021

Changes	- Panel cut-out image added. - Dimension measurements updated. - Wiring diagram, simplified block diagram, DIP switch diagram & application image(s) updated. - Push button image added. - End covering description added to AQ-07, removed from AQ-08. - Cut-and-slice text in all fiber descriptions removed. - Connections image updated. - The test plan example updated. - All table layouts unified in "Technical data". - The IP classification of point sensors updated. - The AWG value updated. - "Disturbance tests" table reformatted. - Order code images updated. - The number for Arcteq's technical support added to the reference information.
Revision	2.02
Date	January 2023
Changes	- Updated the Arcteq logo on the cover. - Added startup inrush currents to auxiliary voltage tech data. - Updated the distance between the flash and the sensor in the "Testing the unit operation time" chapter. - Unified terminology used throughout the manual (e.g. unit and device means the same thing. Now all AQ 100 series relays are called "devices"). - Improved many existing drawings. - Rearranged topics into a more logical order. - Added connection drawings to input and output descriptions under "Connections" chapter. - Added hyperlinks to chapters. (e.g. "See Device features chapter for more information") - Listed more features in Device features chapter. - T3 is now considered to be normally open by default and normally closed as an order option. - Added information about binary output pulse messages. - Many tables have been simplified and made easier to read. - Scheme matrixes and simplified logic diagrams have been made more detailed in "Available schemes" chapter.
Revision	2.03
Date	April 2023
Changes	- Small changes to visual style. - Small improvements to descriptions. - Added SS:4 scheme.
Revision	2.04
Date	September 2024
Changes	- Added point sensor dimensions.
Revision	2.05
Date	August 2026
Changes	- Point sensor "ground" pin symbol changed to "minus". - Added the Using the point sensor connecting cable chapter. - Added the connecting cable to the accessory list in the Ordering information chapter.

2 Safety information

This document contains important instructions that should be saved for future use. Read the document carefully before installing, operating, servicing, or maintaining this equipment. Please read and follow all the instructions carefully to prevent accidents, injury and damage to property.

Additionally, this document may contain four (4) types of special messages to call the reader's attention to useful information as follows:

**NOTICE!**

"Notice" messages indicate relevant factors and conditions to the concept discussed in the text, as well as to other relevant advice.

**CAUTION!**

"Caution" messages indicate a potentially hazardous situation which, if not avoided, could result in minor or moderate personal injury, in equipment/property damage, or software corruption.

**WARNING!**

"Warning" messages indicate a potentially hazardous situation which, if not avoided, could result in death or serious personal injury as well as serious damage to equipment/property.

**DANGER!**

"Danger" messages indicate an imminently hazardous situation which, if not avoided, will result in death or serious personal injury.

These symbols are added throughout the document to ensure all users' personal safety and to avoid unintentional damage to the equipment or connected devices.

Please note that although these warnings relate to direct damage to personnel and/or equipment, it should be understood that operating damaged equipment may also lead to further, indirect damage to personnel and/or equipment. Therefore, we expect any user to fully comply with these special messages.

3 Abbreviations

AQD	– arc quenching device
BI	– binary input
BO	– binary output
CB	– circuit breaker
CBFP	– circuit breaker failure protection
CT	– current transformer
EPROM	– erasable, programmable read-only memory
HSO	– high-speed output
LED	– light emitting diode
LV	– low-voltage
MV	– medium-voltage
NC	– normally closed
NO	– normally open
PCB	– printed circuit board
RF	– radio frequency
Rx	– receiver
SAS	– standard arc scheme
SF	– system failure
Tx	– transceiver
μP	- microprocessor


4 General

The AQ-101 is a sophisticated microprocessor-based arc flash protection device with point sensor channels and a fiber loop sensor channel (order option). The device is designed to minimize the damage caused by an arc fault. This is done by tripping the circuit breaker which supplies current to the fault when sensors detect arc light.

The device includes complete system self-supervision functionality which provides the highest level of dependability as it continuously monitors all internal system functions as well as all external connections.

AQ-101 comes in two variants. The AQ-101 variant is door and panel-mounted, while the AQ-101D variant is mounted on a DIN rail.

Figure. 4 - 1. Arc protection devices AQ-101 (left) and AQ-101D (right).

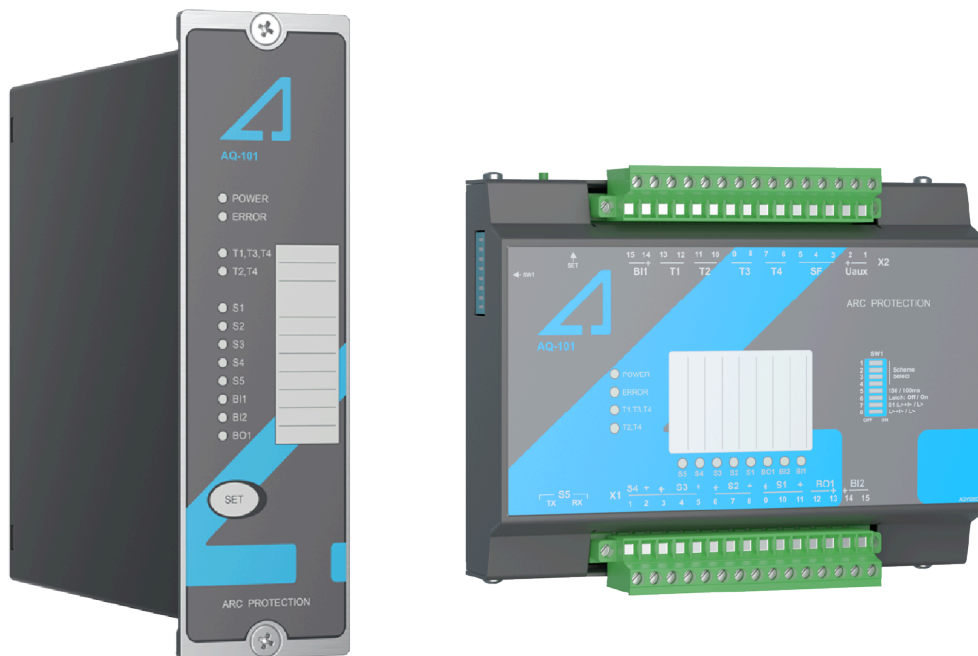

The AQ-101 is designed according to the latest protection relay standards and is therefore suitable for installations in rough environments. These include utilities and power plants (both traditional and renewable), various heavy industry applications (off-shore, marine, oil, gas, mining, steel, etc.) as well as commercial and institutional electrical systems. AQ-101 is suitable for MV and LV switchgears as well as for motor control center applications in both new and retrofitted installations.

5 Device features

AQ-101 is an arc flash protection device which can be applied to a variety of applications. It can be used on its own as a stand-alone device, or it can be a part of a more complex arc protection system by using binary inputs and outputs to connect multiple AQ 100 series devices together.

The following list presents the main features of the device:

- 92...265 V AC/DC auxiliary power supply or 18...72 V DC auxiliary power supply
- four (4) arc flash point sensor channels, max. three (3) point sensors per channel
- one (1) arc flash fiber loop channel (optional)
- two (2) binary inputs
- four (4) trip relays
- one (1) binary output
- one (1) system failure relay (change-over)
- twelve (12) indication LEDs
- eight (8) DIP switches for logic configuration
- one (1) multifunction push button.

6 Connections

The figures below depict the connections of AQ-101 and AQ-101D. Please note that the SF relay is in the de-energized position.

Figure. 6 - 2. Rear terminals of AQ-101.


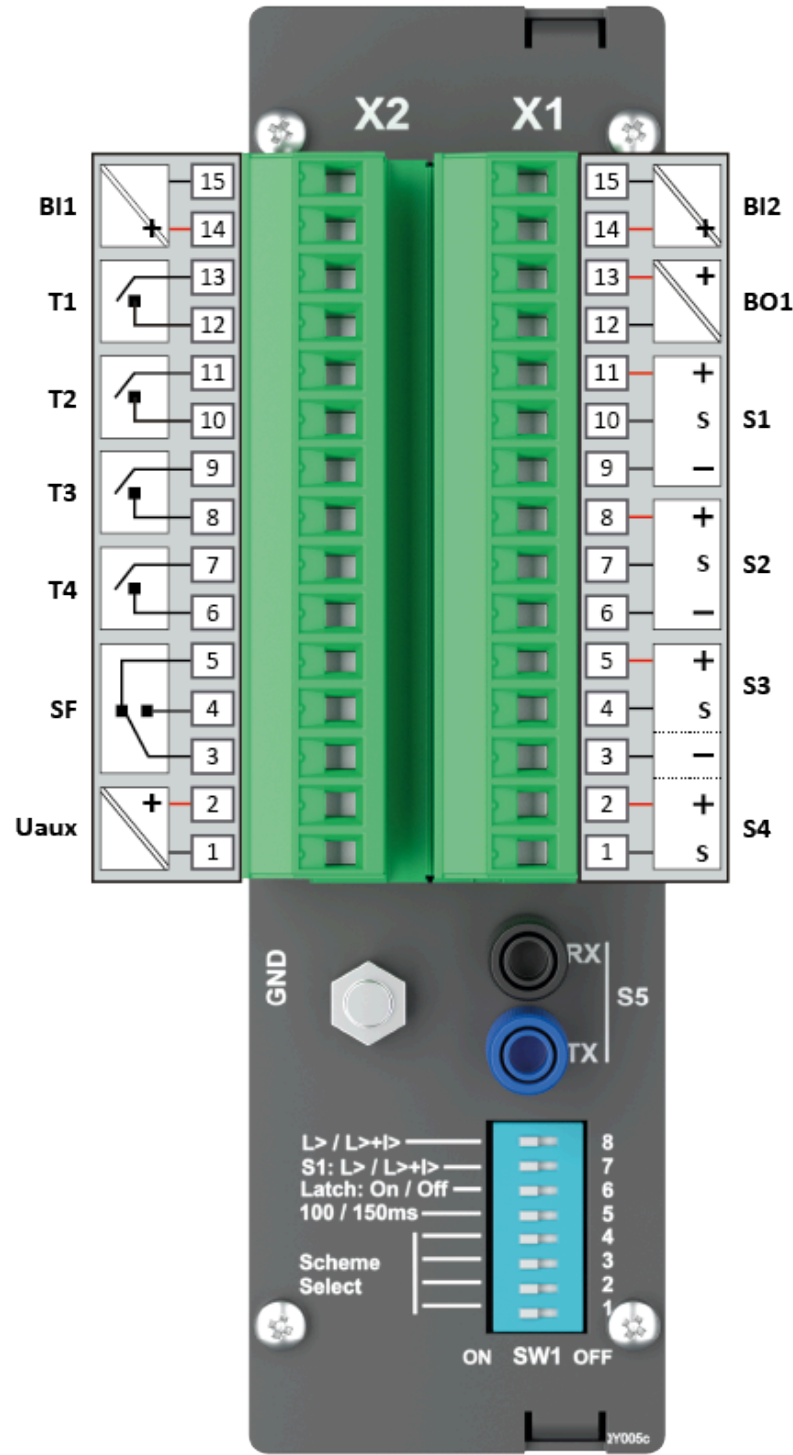



Figure. 6 - 3. Connections of AQ-101D.

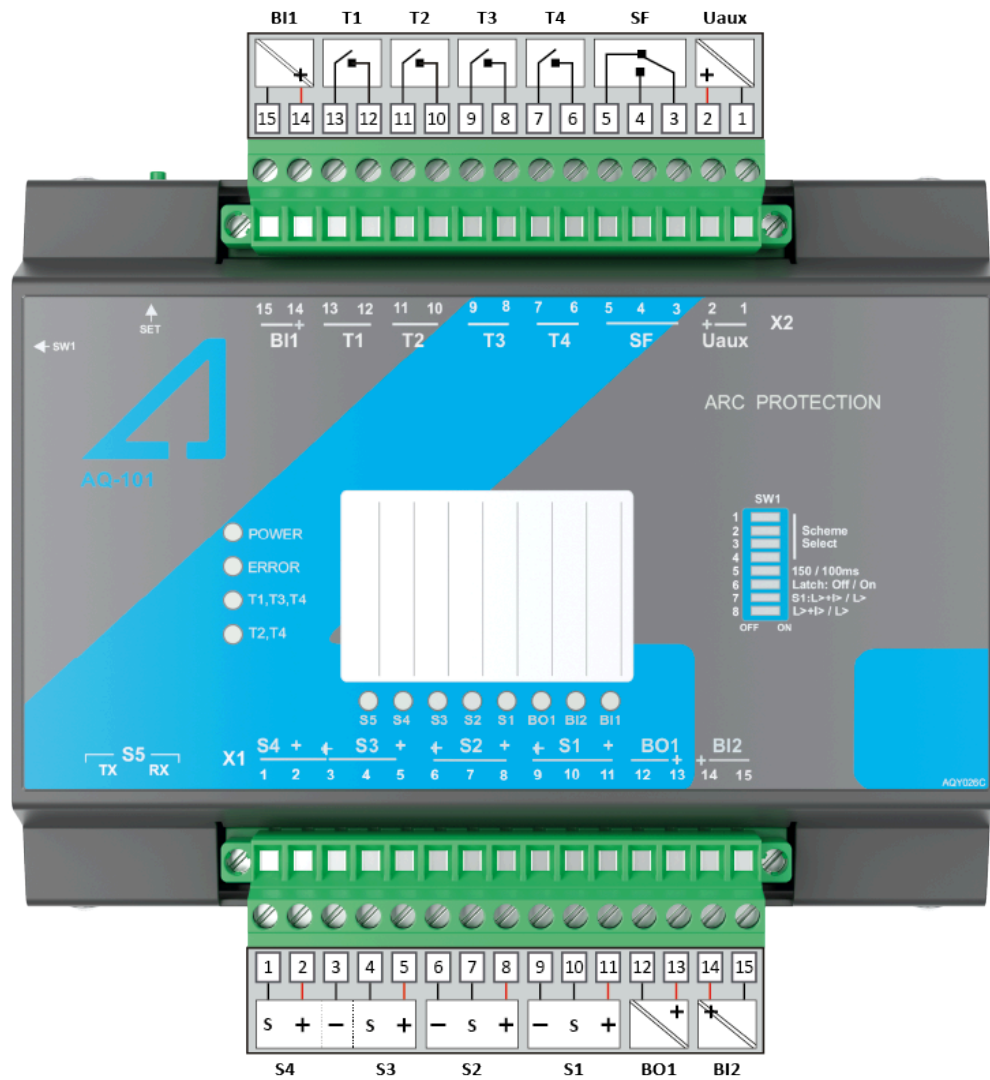

6.1 Inputs


6.1.1 Arc sensor channels

Figure. 6.1.1 - 4. Arc point sensor connections.

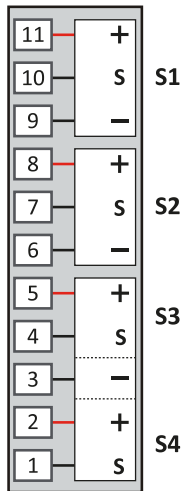

The device has four (4) arc point sensor channels: S1, S2, S3 and S4. Up to three (3) arc point sensors can be connected to each channel. When the arc protection system has been set up, point sensor connections are constantly monitored. In case of sensor fault or disconnection, the device will go into Error mode. See the [System self-supervision](#) chapter for more information.

Figure. 6.1.1 - 5. Optional fiber loop channel connection.

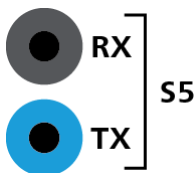


S5 is the optional fiber loop sensor channel with a transmitter (Tx) terminal and a receiver (Rx) terminal. When S5 is configured as a fiber loop arc sensor channel, one of its ends are connected to "Tx" and the other to "Rx". This sensor loop is then continuously monitored by test light pulses that are sent by the "Tx" channel. If a discontinuity is detected, the device goes into Error mode. See the [System self-supervision](#) chapter for more information.

For more information on sensors, please refer to the [Arc sensors](#) chapter.

6.1.2 Binary inputs

Figure. 6.1.2 - 6. Binary input connections.



This device has two (2) binary inputs. Typically, the binary inputs are used for receiving arc light signals, master trip commands or overcurrent signals from other AQ 100 series devices. Function of binary inputs are configured using DIP switches. For more information, please refer to the [DIP switch settings](#) chapter.


The binary inputs are activated when a connected DC signal reaches the specified nominal voltage level of the corresponding input. There are three (3) different nominal voltage levels available: 24, 110, or 220 VDC. The threshold value must be chosen and specified when ordering the device. The actual activation threshold of the binary input is at a lower voltage than the specified nominal voltage value (see the [Technical Data](#) chapter).

AQ 100 series devices are capable of monitoring health of wiring between binary inputs and binary outputs of other AQ 100 series devices in the system. If a binary input loses connection to any of the configured binary outputs, the device will go into Error mode. See the [System self-supervision](#) chapter for more information.

6.2 Outputs

6.2.1 Binary outputs

Figure. 6.2.1 - 7. Binary output connection.



The device has one (1) binary output: BO1. This binary output is used for sending overcurrent, light detection, master trip and other signals to other AQ 100 series devices in the system. The binary output function can be configured with the DIP switches. For more information on the configuration, please refer to the [DIP switch settings](#) chapter.

AQ 100 series binary outputs have an internal 24 VDC power supply. Binary outputs generate a short test pulse every second. Binary inputs of the receiving AQ 100 series devices use these pulses to count the number of connected binary outputs and supervise the I/O connection. See the [System self-supervision](#) chapter for more information.




NOTICE!

Binary output is polarity-sensitive.

6.2.2 Trip relays

Figure. 6.2.2 - 8. Trip relay connections

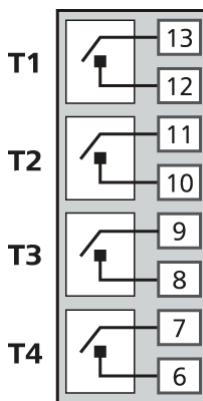


This device has four (4) normally open trip relays. Trip relays T1, T2 and T3 are generally used for tripping circuit breakers. T4 is generally used for tripping one additional disconnecting device, or as a trip alarm (local or remote) monitoring and alarming system.

T3 can alternatively be ordered as a normally closed relay (electronic lock-out relay). Once opened by fault detection it holds its open position until it receives a manual reset command or until auxiliary power supply is lost. When re-applying the auxiliary power supply, the electronic lock-out relay returns to the same position it had prior to the power loss. This normally closed relay can also be used for tripping contactor-controlled devices.

T3 and T4 are always latching relays. Trip relays T1 and T2 can be set as latching relays with a DIP switch setting (for more information, please refer to the [DIP switch settings](#) chapter).

6.2.3 System failure relay


Figure. 6.2.3 - 9. System failure relay connection (de-energized position)

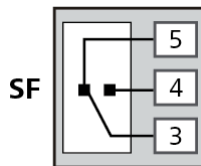

The system failure (SF) relay is of the change-over type (NO/NC) and it is energized when the device is in a healthy condition and powered on. Whenever the device detects a system error or the auxiliary power supply is disconnected, the SF relay changes its state. The state stays this way until the device returns to a healthy condition. See the [System self-supervision](#) chapter for more information.

6.3 Auxiliary voltage

Figure. 6.3 - 10. Auxiliary power supply connection



The auxiliary power supply voltage is 92...265 V AC/DC. Alternatively, the auxiliary power supply can be of 18...72 V DC. This choice must be specified when ordering.

7 Arc sensors

The AQ 100 series supports arc sensing point sensors and fiber optic loop sensors. These sensors can be used with different devices and different switchgear types according to specific application requirements.

Point sensors are typically installed in metal-clad compartments, and they provide a quick and accurate location of the fault area. Fiber loops typically cover a wider protected area with one fiber, when there is no need to pinpoint the exact location of a fault.

7.1 Arc light point sensor AQ-01

AQ-01 is a point sensor with a light-sensitive photodiode element activated by arc light. Its light detection radius is 180 degrees. The default light intensity threshold for an AQ-01 sensor is 8,000 lux. Depending on the demand of the application, light point sensors can be ordered with 25,000 lux or 50,000 lux thresholds.

Figure. 7.1 - 11. The AQ-01 arc light point sensor.



The AQ-01 sensors should be mounted in the switchgear cubicles in such a way that the light-sensitive part covers the protected area as completely as possible. In most cases one sensor per closed metal-clad compartment is sufficient. In open spaces (such as a busbar section) the sensors should be mounted no more than two (2) meters apart.

An AQ-01 is installed either inside or outside the compartment wall. When mounting inside the wall, the sensor is placed on the wall with the colored side against the wall. When mounting outside the wall the sensor is placed on the wall with the grey side against the wall and the eye is pushed into the drilled compartment hole. No external mounting plates are needed regardless of the mounting type. However, you can use mounting brackets, such as Arcteq's sensor bracket accessory, for installation. See the [Using the sensor bracket](#) chapter for more information.

Up to three (3) sensors can be connected in series per channel, with the exception of AQ-103 which can handle only one point sensor per channel. Installing a connection cable is simple as each end of the sensor has a detachable cover over the cable connectors. Reattach the cover once the wires have been installed. See the [Wiring of point sensors](#) chapter for more information. Alternatively, you can use our point sensor connection cable which has been wired at the factory and you only need to snap the connector in place and reattach the cover; see the [Using the point sensor connection cable](#) chapter for more information.



NOTICE!

The AQ-01 point sensor does **not** come with a connection cable, which must be ordered separately. You can also order the pre-wired connection cable from Arcteq.

7.2 Arc light and pressure point sensor AQ-02

AQ-02 is an arc light and pressure point sensor that comes with arc light detection and ambient pressure detection. AQ-02 point sensor activates when both light and pressure are detected. The default light intensity threshold for an AQ-02 sensor is 8,000 lux. Depending on the demand of the application, AQ-02 can also be ordered with 25,000 lux or 50,000 lux thresholds. Its light detection radius is 180 degrees. The pressure threshold is fixed at 0.2 bar above ambient pressure.

Figure. 7.2 - 12. AQ-02 arc light and pressure point sensor.



The AQ-02 sensors should be mounted in the switchgear cubicles in such a way that the light-sensitive part covers the protected area as completely as possible. In most cases one sensor per closed metal-clad compartment is sufficient. The AQ-02 sensors **cannot** be installed in open spaces.

An AQ-02 can only be installed inside the compartment wall as not to block pressure detection located next to "the eye". The sensor is placed on the wall (with the colored side against the wall), and then fixed to the wall with two screws. No external mounting plates are needed regardless of the mounting type. However, you can use mounting brackets, such as Arcteq's sensor bracket accessory, for installation. See the [Using the sensor bracket](#) chapter for more information.

Up to three (3) sensors can be connected in series (with the exception of AQ-103 which can take only one point sensor per channel). Installing a connection cable is simple as each end of the sensor has a detachable cover over the cable connectors. Please remember to reattach the cover once the wires have been installed. See the [Wiring of point sensors](#) chapter for more information. Alternatively, you can use our point sensor connection cable which has been wired at the factory and you only need to snap the connector in place and reattach the cover; see the [Using the point sensor connection cable](#) chapter for more information.



NOTICE!

The AQ-02 point sensor does **not** come with a connection cable, which must be ordered separately. You can also order the pre-wired connection cable from Arcteq.

7.3 Arc light fiber optic loop sensor AQ-06

AQ-06 is an arc light fiber optic loop sensor, which is a plastic fiber optic cable. Fiber sensors are distributed through the protected switchgear cells. The light intensity threshold of an AQ-06 sensor is 8,000 lux. The sensor's detection radius is 360 degrees.

AQ-06 sensors can be ordered in pre-manufactured lengths of 3...40 meters (3 m, 5 m, 10 m, 15 m, 20 m, 25 m, 30 m, 35 m, 40 m).

7.4 Arc light fiber optic loop sensor AQ-07

AQ-07 is an arc light fiber optic loop sensor, which is a robust fiber optic cable with a practically unlimited bending radius. The sensor contains hundreds of glass fiber drains covered by a plastic tube, thus making it extremely strong and durable. Fiber sensors are distributed through the protected switchgear cells.

AQ-07 sensors can be ordered in pre-manufactured lengths of 3...50 meters (3 m, 5 m, 10 m, 15 m, 20 m, 25 m, 30 m, 35 m, 40 m, 45 m, 50 m).

The light intensity threshold of an AQ-07 sensor is 8,000 lux. The sensor's detection radius is 360 degrees.

If necessary, the ends of an AQ-07 cable can be ordered with heat shrinking tubing to avoid light detection outside the protected zone. The covered area can be one (1) or two (2) meters by default; if other lengths are required, please consult the Arcteq sales team. You can find the [Contact and reference information](#) chapter at the end of this manual.

7.5 Arc light fiber optic loop sensor AQ-08

AQ-08 is an arc light fiber optic loop sensor. It is designed to withstand temperatures up to 125 °C, which makes it suitable for e.g. wind turbine windings. AQ-08 is a robust fiber optic cable with a practically unlimited bending radius. The sensor contains hundreds of glass fiber drains that are covered by a plastic tube, thus making it extremely strong and durable. Fiber sensors are distributed through the protected switchgear cells.

AQ-08 sensors can be ordered in pre-manufactured lengths of 3...15 meters (3 m, 5 m, 10 m, 15 m).

The light intensity threshold of an AQ-08 sensor is 8,000 lux. The sensor's detection radius is 360 degrees.

7.6 Sensor dependencies

Compatibility of arc sensor types depend on the hardware available in the AQ 100 series device. The table below describes those dependencies.

Table. 7.6 - 3. Sensor dependencies.

	Point sensors (AQ-01 & AQ-02)	Fiber loops (AQ-06, AQ-07 & AQ-08)
AQ-101	Yes	Order option
AQ-101D	Yes	Order option
AQ-101S	Yes	No
AQ-102	No	Yes
AQ-103	Yes	Order option
AQ-110P	Yes	Order option
AQ-110F	No	Yes

7.7 Wiring of point sensors

The arc point sensor has a three-pin terminal at both ends, enabling daisy-chain connection of multiple sensors to one channel. The pins are labeled **plus (+)**, **sensor (S)**, and **minus (-)**: their order depends on the direction the sensor is viewed from.




NOTICE!

In older point sensor models, the **minus (-)** terminal was marked with a **ground symbol ($\equiv$)** instead.

Both ends are identical, so the sensor can be connected in either orientation.

Figure. 7.7 - 13. Point sensor connection terminals.

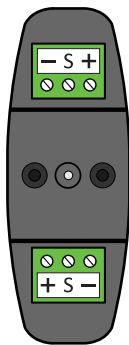

1. Open the sensor covers and detach the connectors.
2. Attach the cable to the connector and to the arc protection device.
3. Reattach the connectors to the sensor.
4. Run the auto-configuration procedure. See the [System setup](#) chapter in the device manual for further details).

Figure. 7.7 - 14. Point sensor connection with a two-wire cable.


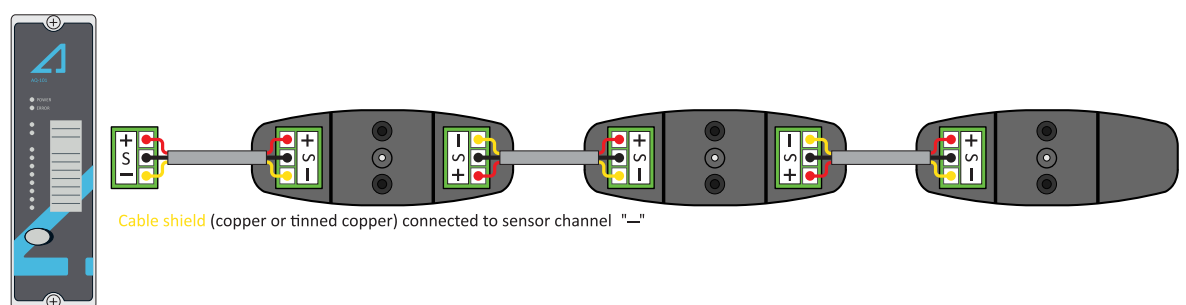


Figure. 7.7 - 15. Point sensor connection with a three-wire cable.



7.8 Using the sensor bracket

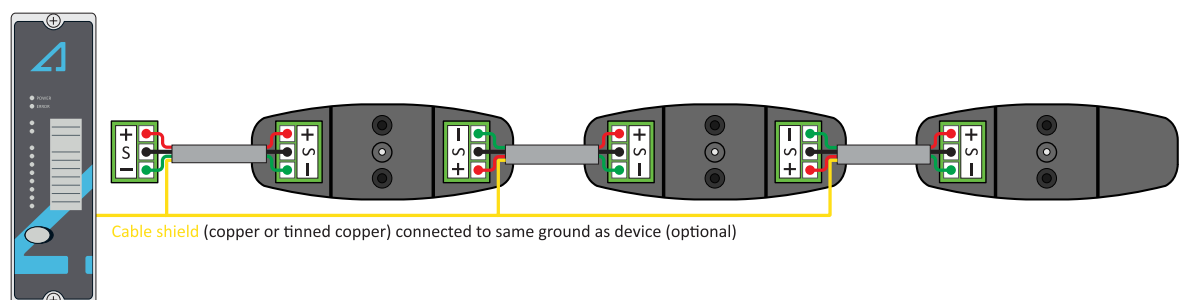

WARNING!

An AQ-01 light sensor can be installed both inside and outside the compartment wall, whereas an AQ-02 light and pressure sensor can only be installed inside the compartment wall!

Arcteq offers a plastic sensor bracket for easier installation of point sensors to compartment walls.

When using the sensor bracket, begin by situating the bracket correctly with regards to the arc-protected space. An AQ-01 light sensor can be installed both inside and outside the compartment wall: the sensor's eye can be towards the bracket (the first figure below) or facing away from the bracket (the second figure below). However, an AQ-02 light and pressure sensor can only be installed inside the compartment wall with the sensor's eye facing away from the bracket.

To install a point sensor with the sensor bracket, screw the bracket in place by the two holes on the side and then snap the point sensor in the bracket hooks.

Figure. 7.8 - 16. Installing a point sensor outside the wall, with the eye towards the bracket.


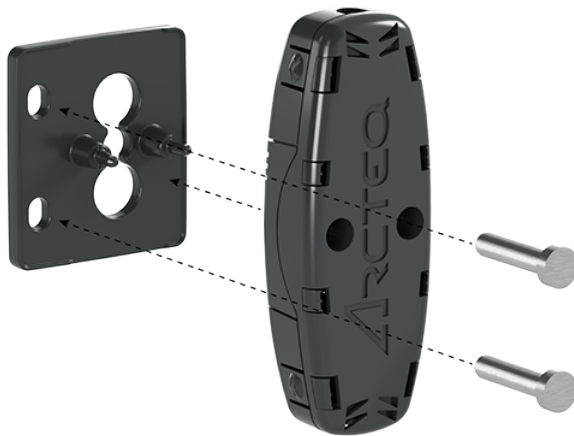


Figure. 7.8 - 17. Installing a point sensor inside the wall, with the eye facing away from the bracket.

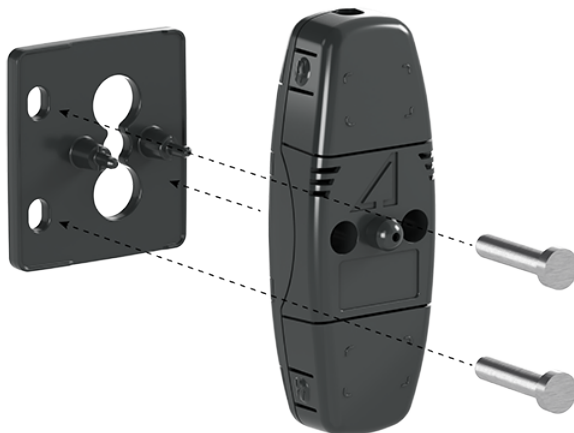

8 Operation and configuration

8.1 DIP switch settings

Configuration of the operation logic and other functionalities are done with DIP switches. The DIP switches are located at the back of the device.

Main operation logic can be defined with "Scheme selection" DIP switches. Logic schemes are described in the [Logic schemes](#) chapter.

Tripping can be set with DIP switches to require either just arc light ("Light only" mode) or both arc light and overcurrent simultaneously ("Light and current" mode). Adding overcurrent criteria ensures the device trips when an arc fault occurs but not when a strong natural light source hits the light sensor (e.g. sunlight). Overcurrent signal comes from external devices (mainly other AQ 100 series devices) and are connected to a binary input.

If the selected scheme uses CBFP (circuit breaker failure protection) its time delay can be set with "100 ms / 150 ms" DIP switch. CBFP logic depends on the chosen logic scheme. See the [Circuit breaker failure protection](#) chapter for more information.



NOTICE!

Please note that while the switch numbers and their functions are the same for both AQ-101 and AQ-101D, in the DIN rail variant of the device the switches are "upside down" (that is, switch 1 is at the top of the DIP switch when normally switch 8 is at the top)!

Figure. 8.1 - 18. DIP switch diagram.

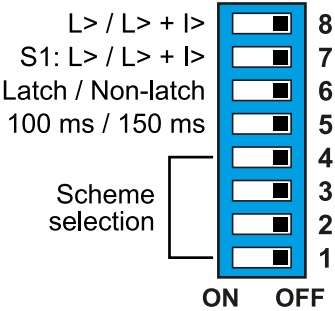


Table. 8.1 - 4. DIP switch settings.

Switch	Function selection	ON (left position)	OFF (right position)
8	The tripping criterion for the S2, S3, S4 and S5 sensor channels.	Tripping on light only (L>).	Light detection only trips if overcurrent is also detected at the same time (L> + I>).
7	The tripping criterion for the S1 sensor channel.		
6	Enables or disables latching of T1 and T2 trip relays.	T1 and T2 operate as latching relays.	T1 and T2 latching is disabled.
5	The setting for the CBFP time.	The CBFP time is set to 100 ms.	The CBFP time is set to 150 ms.

Switch	Function selection	ON (left position)	OFF (right position)
4-1	Scheme selection. Please refer to the Logic schemes chapter.	Switch 1: 1 Switch 2: 2 Switch 3: 4 Switch 4: 8	Switch 1: 0 Switch 2: 0 Switch 3: 0 Switch 4: 0



NOTICE!


The T3 and T4 trip relays are always latching.

8.2 Logic schemes

The schemes described below are the most commonly used ones for AQ-101 devices. However, additional schemes are also available; please contact your nearest Arcteq representative for more information on those schemes. The schemes are configured using the DIP switches numbered 1...4 ("Scheme selection"). The scheme selection is based on binary arithmetic:

- Switch 1: 1
- Switch 2: 2
- Switch 3: 4
- Switch 4: 8

Figure. 8.2 - 19. DIP switches used for selecting the logic scheme.

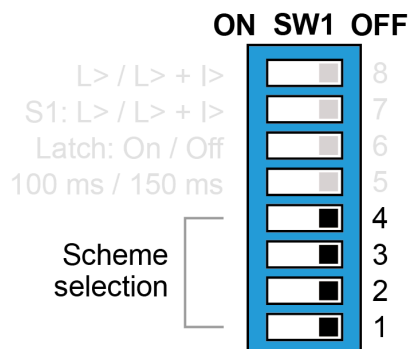

AQ 100 series arc protection devices can be used as a stand-alone device or as a part of a more complex arc protection system with multiple AQ 100 series devices. The most convenient way to set the device to a more complex arc protection system is to use Standard Arc Schemes (SAS). For detailed instructions on each of the available Standard Arc Schemes please refer to the AQ-SAS™ booklet (can be found at arcteq.com/downloads).

8.2.1 SS:0 Non-selective arc protection

The logic scheme SS:0 can be applied as a stand-alone arc protection scheme, but it can also be used for protecting outgoing feeder compartments non-selectively. If any of the light sensor channels detect light, all trip contacts are closed and BO1 sends a light signal to any connected external devices. BI2 can be used for receiving light signals from external devices. BI1 can be used for receiving overcurrent signals from external devices.

Figure. 8.2.1 - 20. SS:0 example application.


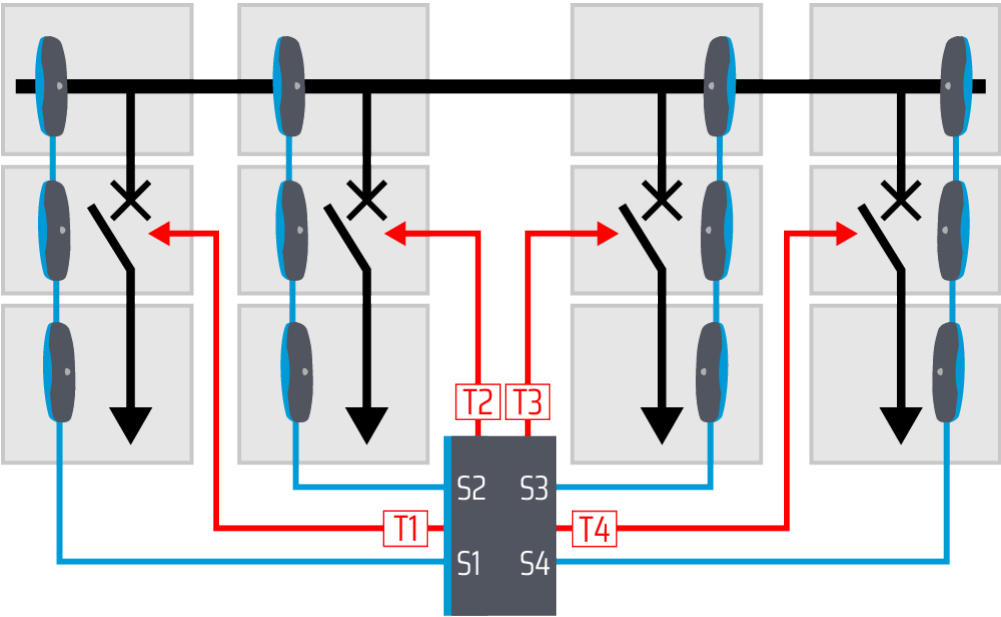


Figure. 8.2.1 - 21. Logic matrix of SS:0.

SS:0		OUTPUTS				
		T1	T2	T3	T4	BO1
INPUTS	S1 - S5	x ¹	x ¹	x ¹	x ¹	x
	Lext> (BI2)	x ¹	x ¹	x ¹	x ¹	

1. Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.


Figure. 8.2.1 - 22. Simplified logic diagram of SS:0.

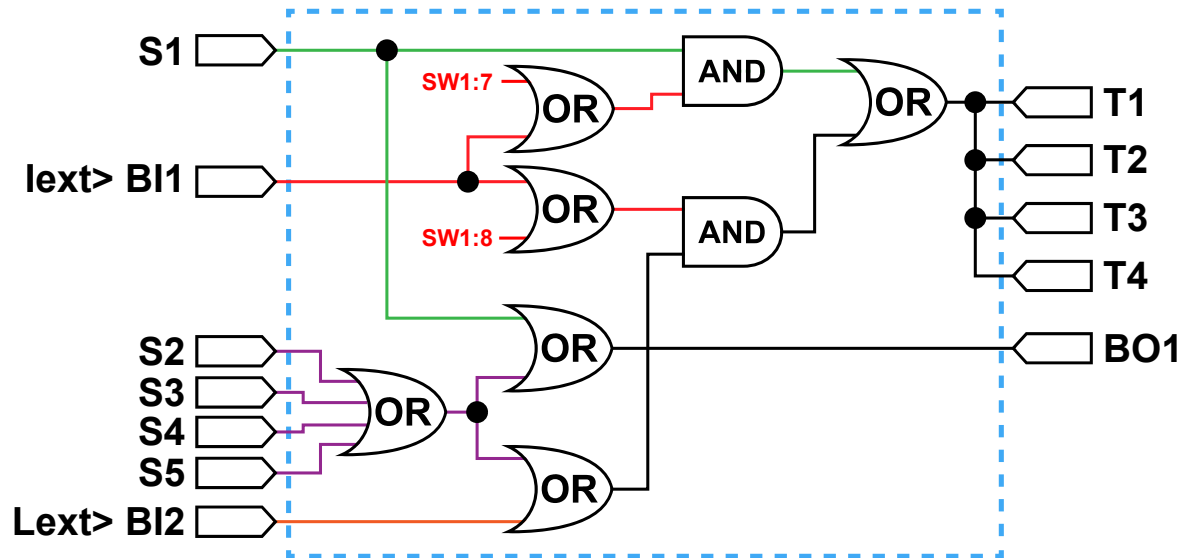

8.2.2 SS:1 One outgoing feeder per device

The logic scheme SS:1 is mainly used in selective outgoing feeder arc protection solutions. With this scheme it is possible to protect one outgoing feeder per device.

Figure. 8.2.2 - 23. SS:1 example application.

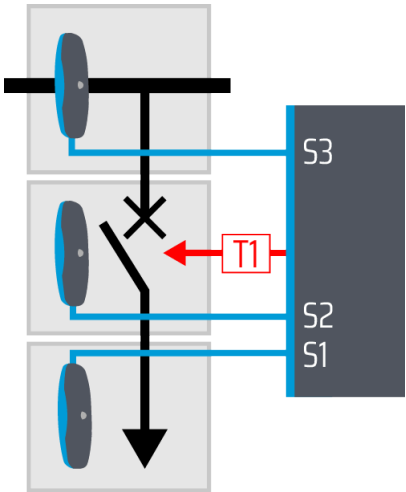

If a fault is detected in the outgoing feeder cable compartment with S1, the circuit breaker of the outgoing feeder will be tripped with T1. If the fault is not cleared on time, BO1 sends a light signal to the master device at the incoming feeder after the CBFP time delay has passed.

If a fault is detected in the circuit breaker compartment (S2) or in the busbar compartment (S3), BO1 sends the light signal to the master device at the incoming feeder. BI2 can be used for receiving a master trip command from an incoming feeder device. BI1 can be used for receiving overcurrent signals from external devices.


You can find a more detailed description of this scheme in the AQ-SAS™ booklet.

Figure. 8.2.2 - 24. Logic matrix of SS:1.

SS:1		OUTPUTS				
		T1	T2	T3	T4	BO1
INPUTS	S1	x ¹	CBFP ¹	x ¹	x ¹	CBFP
	S2 - S5		CBFP ¹		CBFP ¹	x
	Master Trip (BI2)	x	CBFP	x	x	

1. Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.


Figure. 8.2.2 - 25. Simplified logic diagram of SS:1.

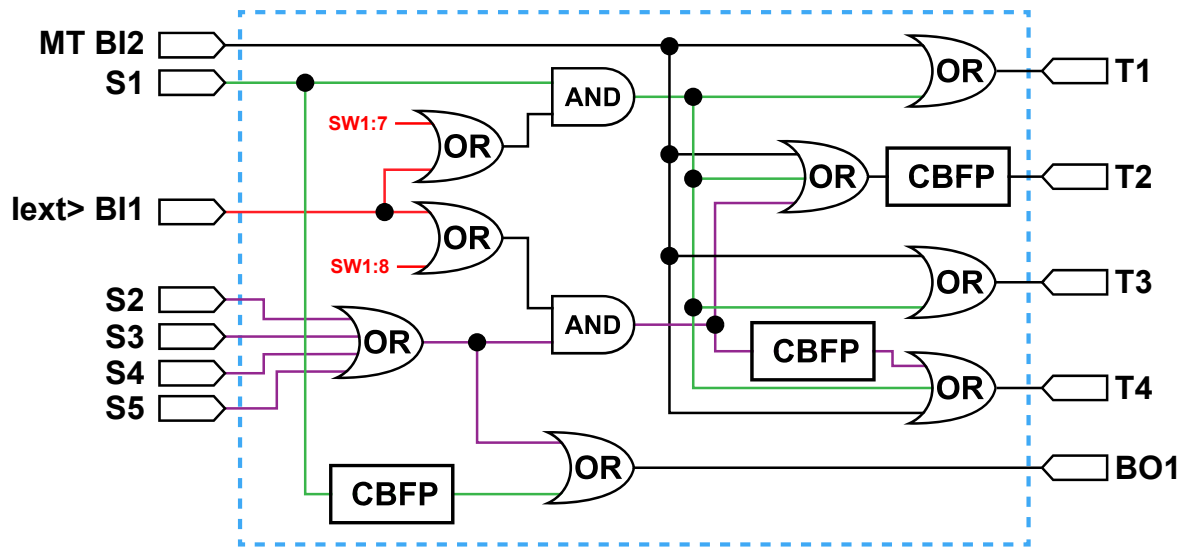

8.2.3 SS:4 Two outgoing feeders per device

The logic scheme SS:4 is mainly used in selective outgoing feeder arc protection solutions. Protection logic is similar to SS:1 but SS:4 is able to protect two outgoing feeders and can also trip the bus bar section tie breaker (if applicable).

Figure. 8.2.3 - 26. SS:4 example application.

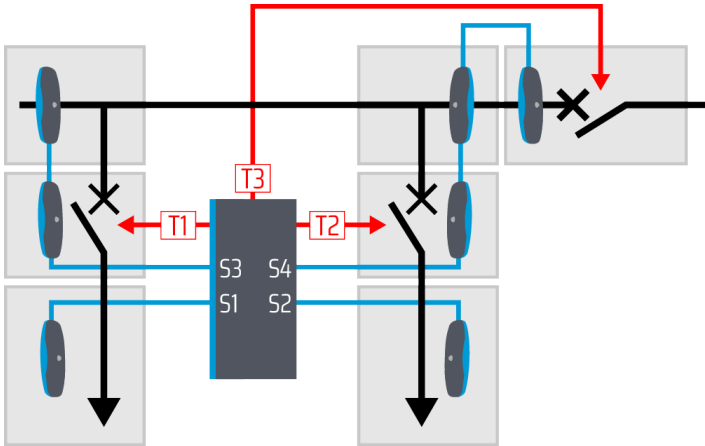

If a fault is detected in either of the outgoing feeder cable compartments (S1 or S2), the the circuit breaker of the outgoing feeder with the fault will be tripped with T1 or T2. If the fault is not cleared on time, T3 can trip the tie breaker and BO1 sends light signal to the master device at the incoming feeder after the CBFP time delay has passed.

If a fault is detected at either of the circuit breaker compartments or in the busbar compartment (S3, S4 or S5), BO1 sends the light signal to the master device at the incoming feeder. BI2 can be used for receiving a master trip command from incoming feeder device. BI1 can be used for receiving overcurrent signals from external devices.


You can find a more detailed description of this scheme in the AQ-SAS™ booklet.

Figure. 8.2.3 - 27. Logic matrix of SS:4.

SS:4		OUTPUTS				
		T1	T2	T3	T4	BO1
INPUTS	S1	x ¹		CBFP ¹	x ¹	CBFP
	S2		x ¹	CBFP ¹	x ¹	CBFP
	S3 - S5			x ¹	x ¹	x
	Master Trip (BI2)	x	x	x	x	

1. Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

Figure. 8.2.3 - 28. Simplified logic diagram of SS:4.

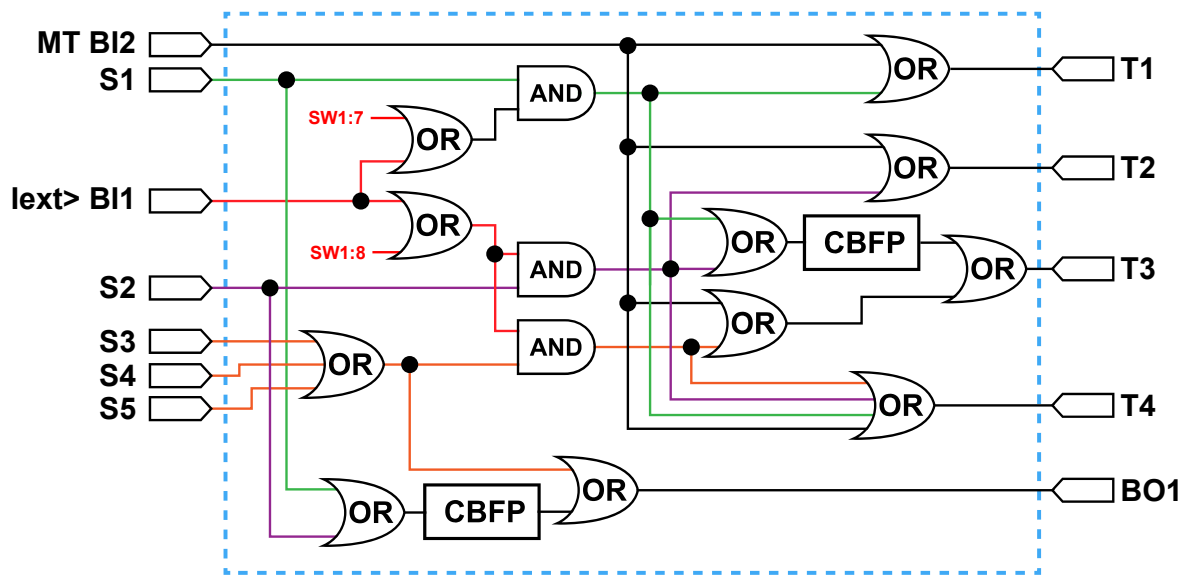

8.3 Push button (SET)

The device has one push button, **SET**, and it can be used for all operational functions. The push button is used for:


1. Setting up the system (also known as auto-configuration)
2. Resetting the indicator LEDs
3. Resetting latched outputs
4. Checking the input connections



WARNING!

Do **NOT** use force when pushing the button, as this may cause the button to lodge deep inside the chassis!

Figure. 8.3 - 29. The "SET" push button on the device's front panel.

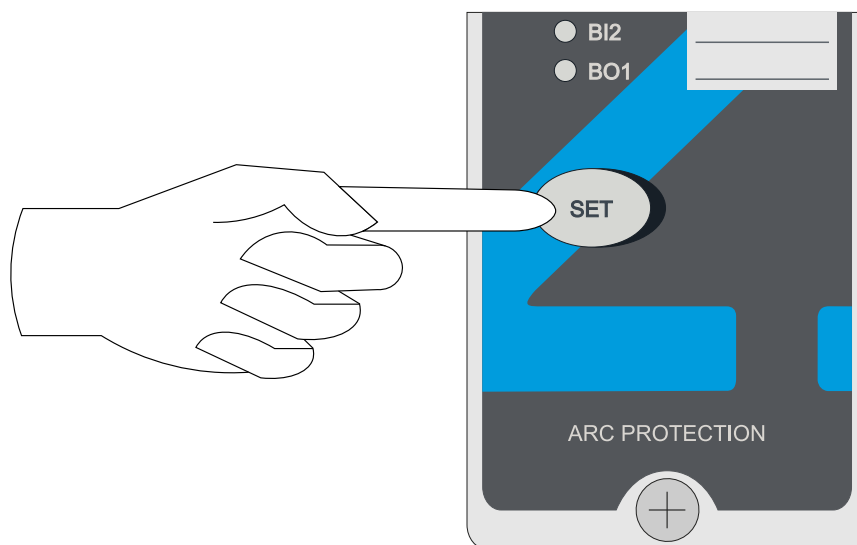

8.3.1 System setup (auto-configuration)

After DIP switches have been set to correct position and all sensors, binary inputs and binary outputs have been connected, a system setup procedure (also known as auto-configuration) must be performed. The sequence is initialized by pressing the **SET** push button for two seconds. This causes the sensor and binary I/O LEDs to start blinking. The device scans these inputs to see if they are connected; when an input is detected, the corresponding LED lights up to indicate that a connection was found. All inputs that are not connected continue to blink for three more seconds. Then, all LEDs are turned off. Additionally, the DIP switch settings are stored in the non-volatile memory after this sequence.

If the device detects any deviation from the saved configuration, self-supervision system issues an alarm. See the [System self-supervision](#) chapter for more information.

All arc sensors are operational even when they have not been auto-configured. System setup is only used for self-supervision purposes.

**NOTICE!**

Please note that to reconfigure a device with fewer connections (BI or arc sensors) than in the previously memorized setup, one of the DIP switches must be moved back and forth once before the system setup procedure is carried out. You can reconfigure a device with more connections at any time without having to move one of the DIP switches.

8.3.2 Reset

All LED indications and latched trip relays can be reset by pressing the **SET** push button.

8.3.3 Input connection check

After the system setup (auto-configuration) procedure is completed, you can verify the connectivity of arc sensors and binary input channels by pressing the **SET** push button three (3) times within two (2) seconds. The LEDs of the corresponding arc sensors, binary input channels and the "Power" LED start blinking. The LEDs blink as many times as there are connected sensors and binary output channels from other devices.

8.4 Circuit breaker failure protection

The circuit breaker failure protection function is used for detecting a failure to open the circuit breaker when tripping command has been given by the arc protection relay. The CBFP function activates when the arc protection relay detects the presence of fault for a set duration (100 ms or 150 ms). In case of circuit breaker failure the arc protection relay will send a trip signal to the surrounding breakers. Please note that if the device is set to operate on both arc light and overcurrent, both conditions must persist to activate the CBFP command. The CBFP function can be set to operate either on a 100-ms or a 150-ms delay (please refer to the [DIP switch settings](#) chapter for more information). The operation logic of CBFP function depends on the chosen logic scheme (see the [Logic schemes](#) chapter for more information).

8.5 LED indicator functions

Both the AQ-101 and its AQ-101D variant have twelve (12) indication LEDs on the device's front panel. Apart from the "Power" and "Error" LEDs, the user can write their own identifications for each of the remaining LEDs on the text insert located in the transparent pocket next to the LEDs.

When the device is powered up, it performs an LED test. All LEDs turn on for two (2) seconds and then turn off; only the blue "Power" LED stays on.

When the device operates normally, only the blue "Power" LED is lit.

If an arc sensor is activated, its corresponding LED turns on. Activated arc sensor LEDs will stay on until user has reset them with "SET" push button.

If there is a loose sensor wire or if the self-supervision function detects a configuration mismatch (that is, a new sensor has been attached but the auto-configuration system setup has not been run), the corresponding LED starts flashing and the "Error" LED activates.

The binary I/O LEDs indicate the status of the input and output lines. If any of the lines become active, the corresponding LED turns on. All light channel and trip indication LEDs are latched, even if the DIP switch settings are in the non-latched mode.

All LED indications are stored in the non-volatile memory (EPROM) to help identify the necessary trip information even after auxiliary power is lost. When the device is re-powered after a power supply loss, the front panel shows the status of all LEDs.

You can clear the LEDs by pushing the SET button.

8.6 LED operations guide

Table. 8.6 - 5. LED operation description.

LED name (color)	Light off	Steady light	Blinking light	Action if abnormal
POWER (blue)	The auxiliary power supply is disconnected.	The auxiliary power supply is connected.	(N/A)	Check the power supply.
ERROR (red)	The system is healthy.	A system failure has occurred.	A configuration mismatch has been detected. Protection is partially operational.	Verify the system condition (see the System self-supervision and Troubleshooting chapters).
T1—T4 (red)	Normal status.	The trip relay has activated.	(N/A)	Check what caused the trip, clear the fault and reset the indicator LEDs with the push button.
S1—S4 (amber)	Normal status.	Light information has activated the sensor channel.	There is a loose connection or a system setup has not been performed.	Check the sensor wire connection or perform a system setup (see the System setup chapter); or , check what activated the sensor.
S5 (amber)	Normal status.	The fiber sensor channel has been activated.	There is a loose fiber sensor connection or a system setup has not been performed.	Check the fiber continuity or perform a system setup (see the System setup chapter); or , check what activated the fiber channel.

LED name (color)	Light off	Steady light	Blinking light	Action if abnormal
BI1–BI2 (amber)	Normal status.	The binary input has been activated.	The binary input has a loose connection.	Check the binary input wiring.
BO1 (amber)	Normal status.	The binary output has been activated.	(N/A)	—

8.7 Non-volatile memory

All critical system data (such as DIP switch settings and the system setup file) are stored in the non-volatile memory (EPROM) to ensure accurate operation and full self-supervision even if auxiliary power is lost temporarily.

Additionally, all LED indications are stored in the non-volatile memory to provide a quick recovery of the system status indication. This feature is especially important if tripping causes the device to lose its auxiliary power.

The non-volatile memory does not require a power supply to maintain the information and it retains the settings and the indications permanently without power.

9 System self-supervision

AQ 100 series devices have an extensive self-supervision function, including both internal functions and external connections. The self-supervision function monitors the following:

- power supply
- hardware
- software
- binary input connection(s)
- sensor connection(s)
- DIP switch settings

When the device's condition is healthy and is powered on, the "Power" LED is lit and the system failure (SF) relay is energized. If the self-supervision function detects a faulty condition or if the power supply fails, the SF relay is released and the "Error" LED becomes lit.

Point sensor connection monitoring

If a point sensor failure occurs, the device will go into Error mode. The "Error" LED turns on, the SF relay releases, and the LED of the corresponding faulty sensor channel starts blinking. In this situation the device is still operational, although the faulty sensor channel is blocked. If the error is resolved, the device automatically energizes the SF relay and turns off the "Error" LED and the blinking sensor channel LED. If one or more of the sensors are disconnected, the healthy sensors remain in use and the device remains operational accordingly. However, the device remains in Error mode until the sensors are connected again.

Fiber loop connection monitoring

Fiber loop channel(s) is monitored by a test light pulse that travels through the loop from TX (transmitter) connector to RX (receiver) connector. If a discontinuity is detected, the "Error" LED turns on, the SF relay releases, and the LED of the corresponding faulty sensor channel starts blinking. If the error is resolved, the device automatically clears the system failure status, energizing the SF relay and turning off the "Error" LED. The device remains in Error mode until the sensors are connected again.

Binary input connection monitoring

During system setup (auto-configuration) AQ 100 series device checks how many AQ 100 device binary outputs or high-speed outputs have been connected to binary inputs. Each AQ 100 series device binary output and high-speed output constantly sends a short pulse every second which the receiving binary input uses to count the number of connected devices. If any of the outputs are disconnected after the system setup, the binary input will detect the mismatch and the device will go into Error mode and the binary input LED will blink. If the error is resolved, the device automatically clears the system failure status, energizing the SF relay and turning off the "Error" LED.

DIP switch setting monitoring

The device goes into Error mode, if a DIP switch setting is changed after the system setup procedure has been performed. However, the configured (stored) settings are still valid and the device is still operational.


10 Dimensions and installation

The device can be either door-mounted or panel-mounted in a standard 19 inch rack. The device's dimensions (without connectors) are as follows:

- Height: 177 mm (6.97 in)
- Width: 51 mm (2.00 in)
- Depth: 168 mm (6.61 in).

The figure below presents the dimension of the device visually. It also shows the dimensions of the cut-out (bottom-left) required when mounting the device on a panel.

Figure. 10 - 30. Dimensions of the device and its cut-out panel.

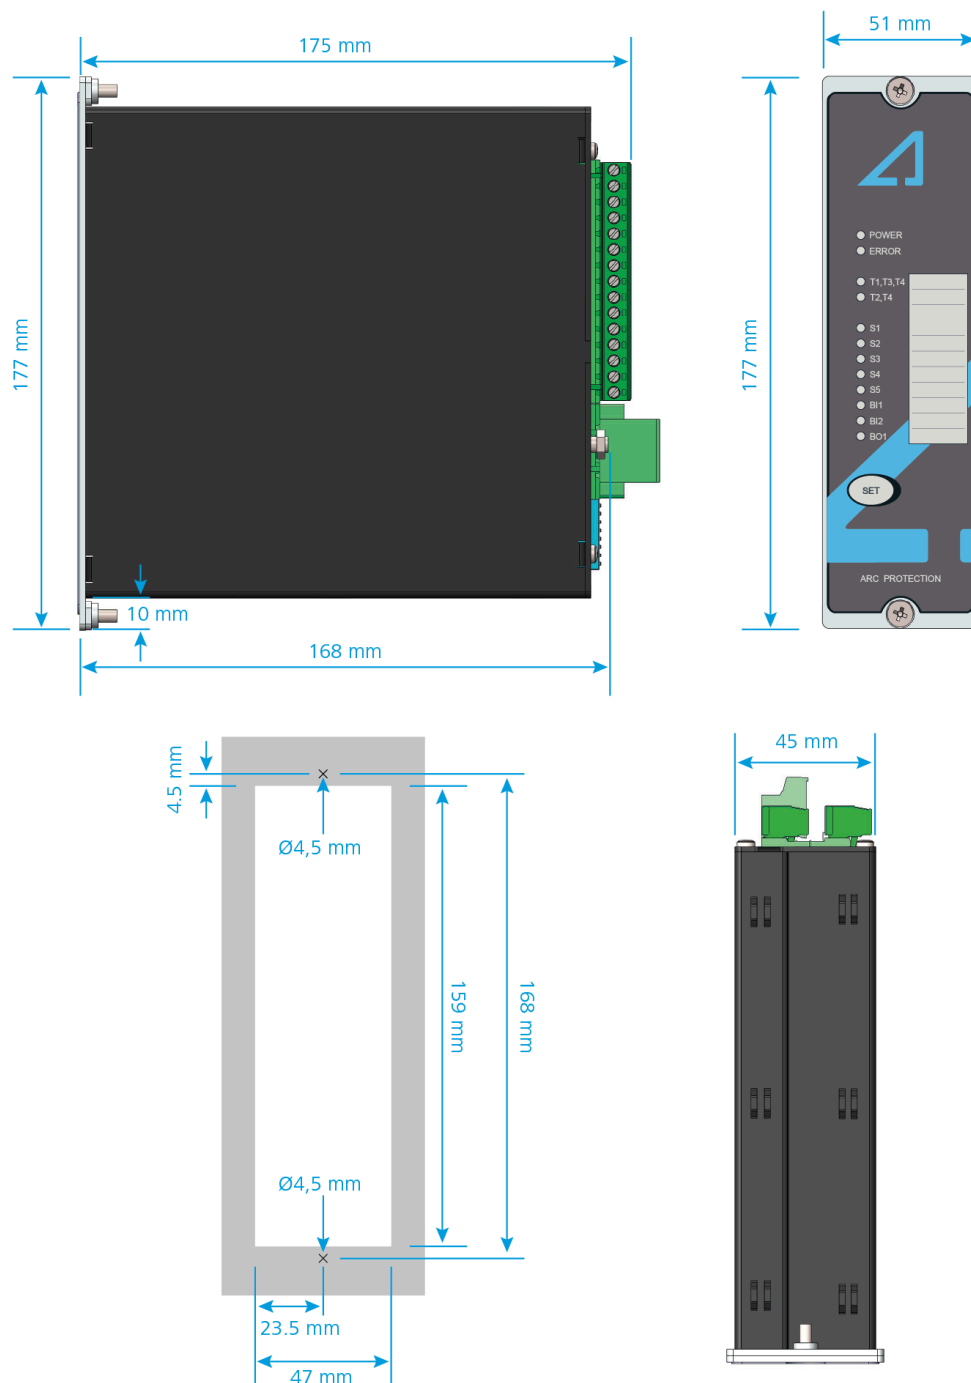

DIN rail variant

The dimensions of the DIN-rail variant are as follows:

- Height: 109 mm (4.29 in)
- Width: 145 mm (5.71 in)
- Depth: 34 mm (1.34 in).

Figure. 10 - 31. Dimensions of the DIN rail variant of the device.

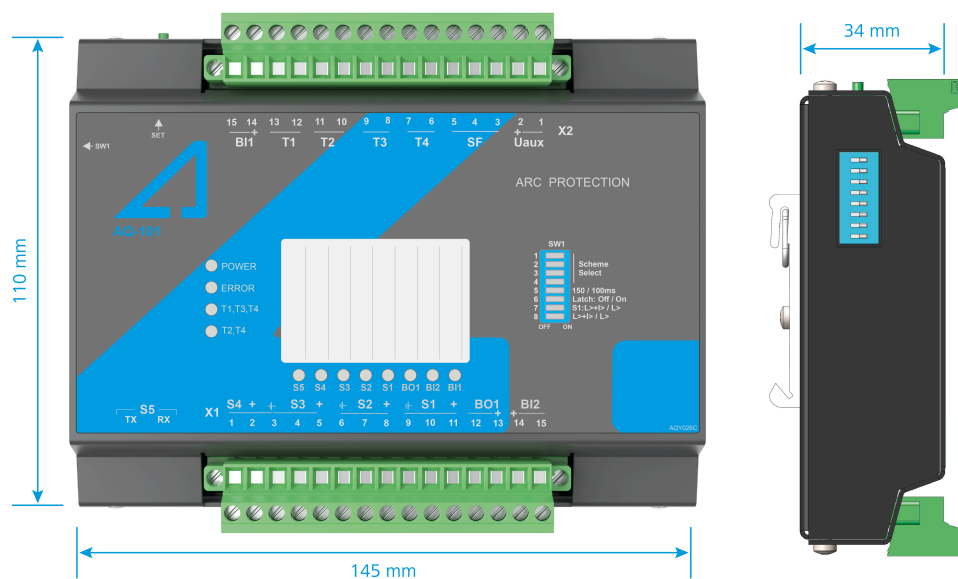


Figure. 10 - 32. Installing a AQ-100 series device to a door.


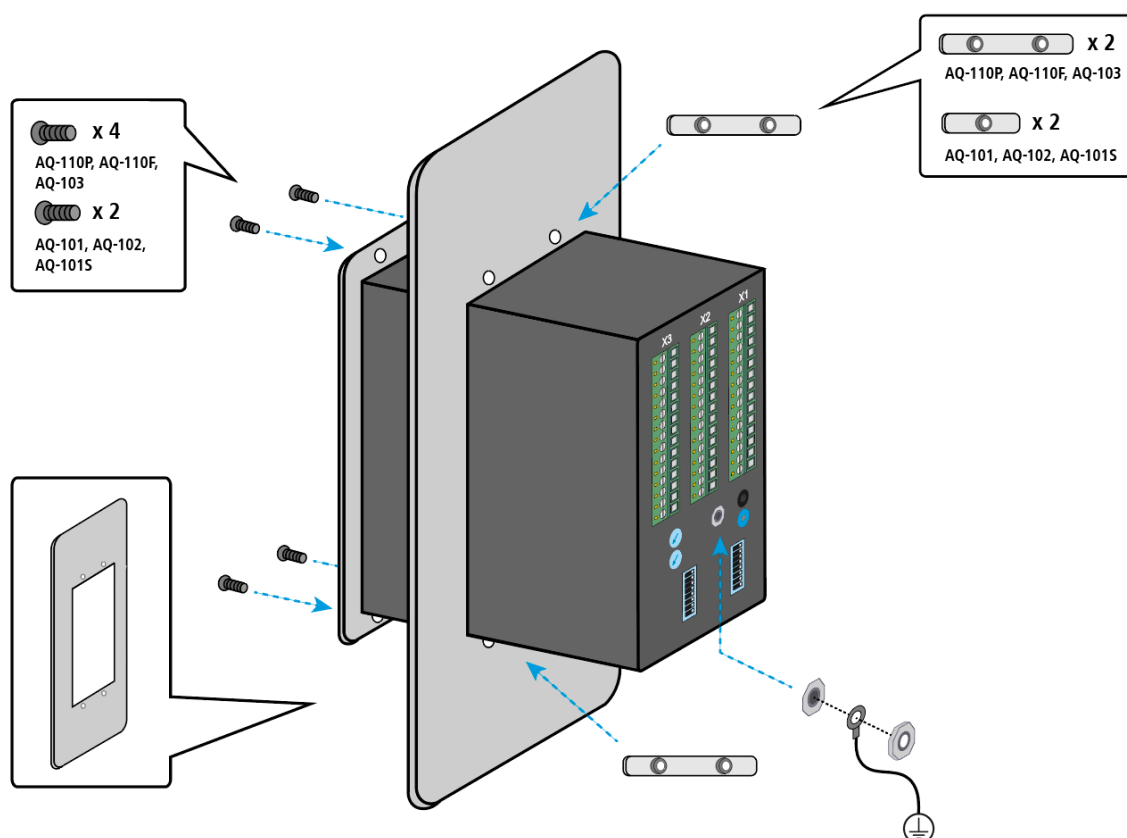


Figure. 10 - 33. Installing the DIN rail variant.

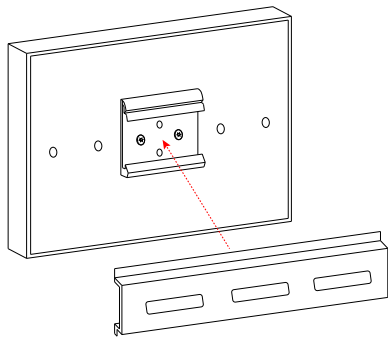

Point sensors

Figure. 10 - 34. Dimensions of arc flash sensors.

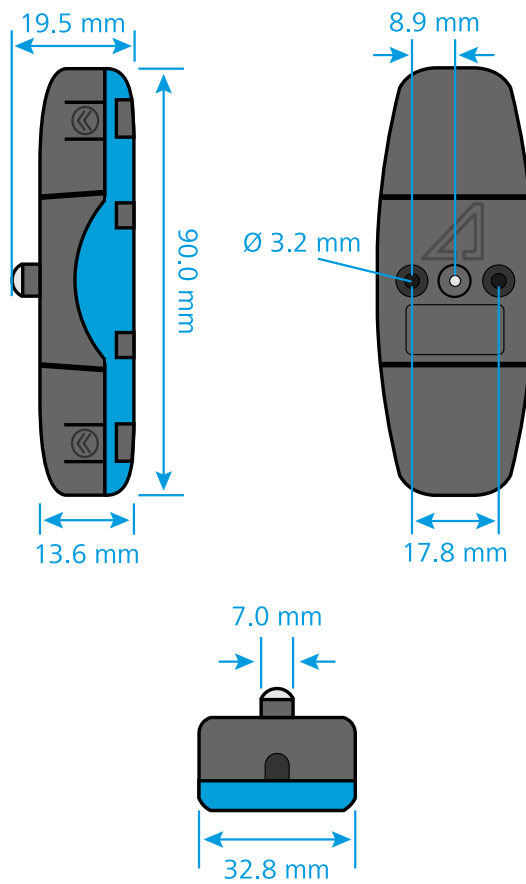


Figure. 10 - 35. Dimensions of the Arcteq sensor bracket.

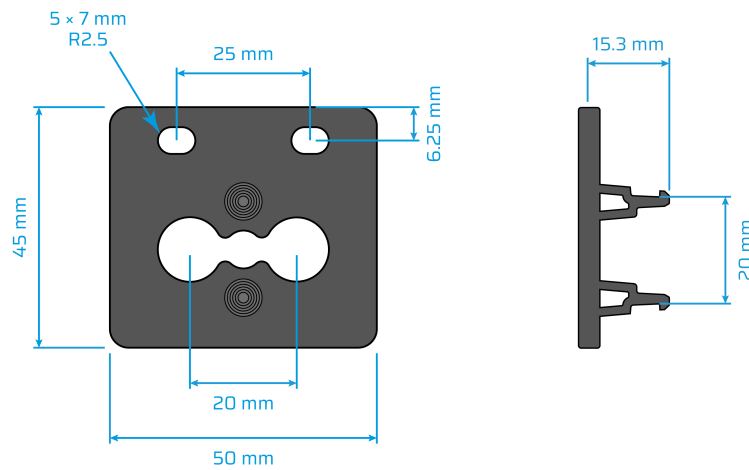
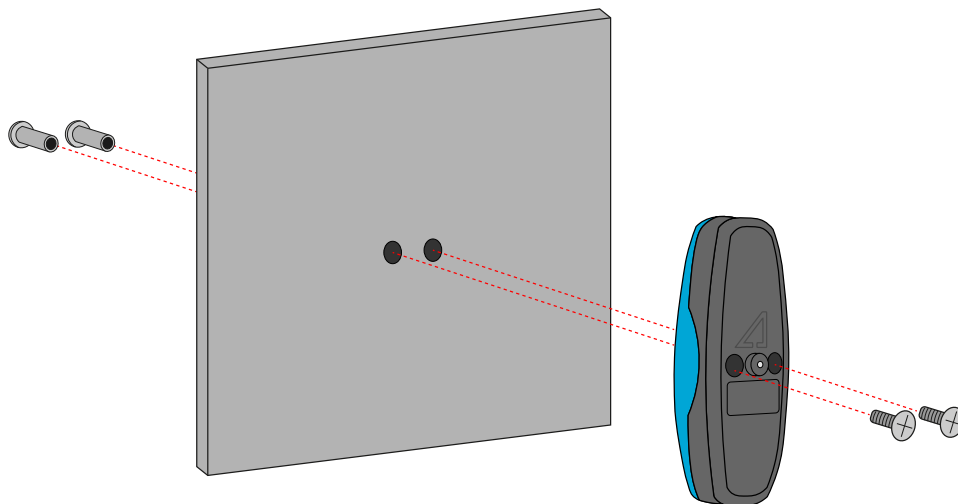


Figure. 10 - 36. Installing an arc flash sensor.


**NOTICE!**

Although the image above depicts the installation of an AQ-01 point sensor, please note that an AQ-02 pressure and point sensor is installed in the same way.


Fiber loops

1. Drill holes on the wall for the sensor cable to enter the protected compartment.


2. Install protective covers in the holes to ensure the sensor cable remains unharmed by rough edges.

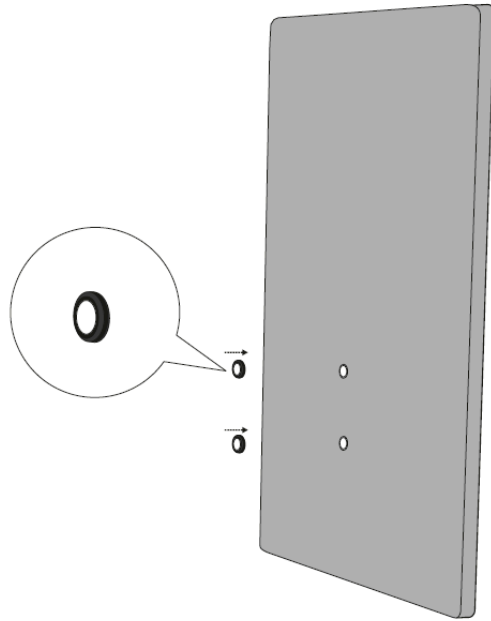

3. Run the sensor cable through the holes and along the protected area. Fasten it to the compartment walls with cable clips or some other appropriate anchoring method.

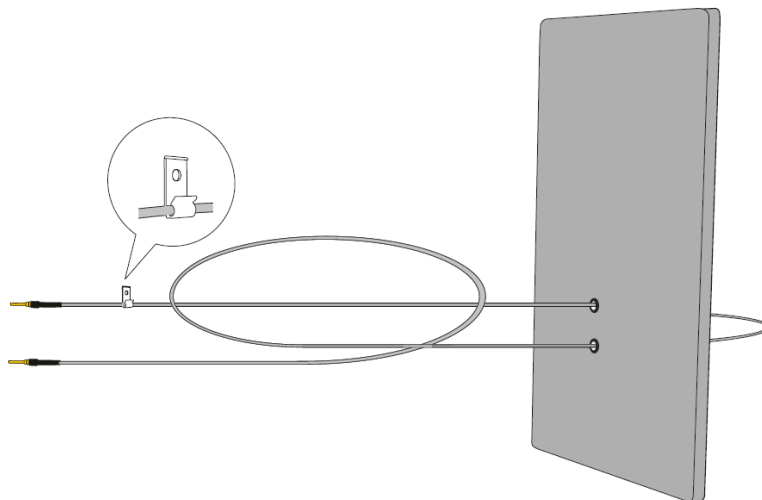

4. Turn the black and blue receiver ("Rx") and transceiver ("Tx") screws counter-clockwise and plug in the sensor cable terminals. Then turn the screws clockwise to secure the terminals in their place.

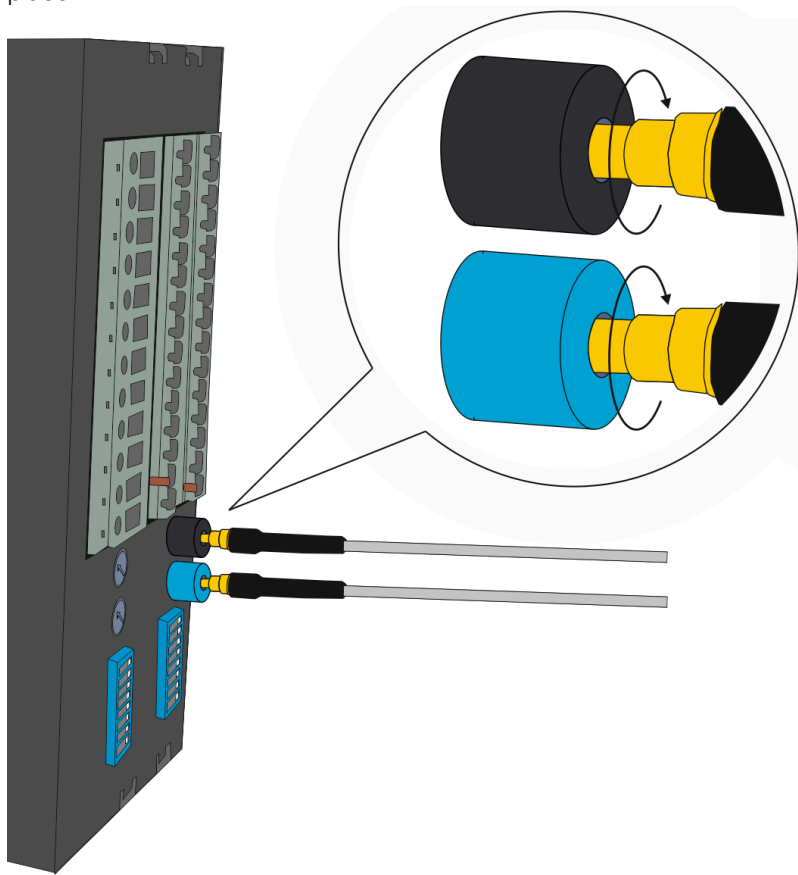

11 Testing

It is recommended that the device is tested prior to substation energizing. Testing is carried out by simulating an arc light for each sensor and verifying that the correct trip contact(s) tripped and that the correct indicator LED(s) turned on.

Any strong camera flash works well to simulate arc light. Please note that small LED lights like smartphone flashes are not strong enough to activate a point sensor or a fiber loop. Having a self-timer helps with the testing process because it can be connected to the test kit. Any strong flashlight works to test non-latched signals and the CBFP function. Before testing please check that the equipment used has a fully charged battery.

11.1 Testing the light-only mode

1. Check that the DIP switch settings are positioned according to your application.
2. Activate the camera flash within 30 cm (12 inches) of the sensor that is being tested.
3. Verify that the indicator LED of the corresponding sensor channel is lit.
4. Verify the activation(s) of the trip relay(s) by checking the circuit breaker's status, or by monitoring the trip contact's status. The circuit breaker should open, or the contacts operate. Please note that you achieve the best test results when you operate the circuit breaker while testing.
5. Verify that the indicator LED(s) of the corresponding trip relay(s) is lit.
6. If you are using the BO1 binary output, verify its signal activation either through the status change of the relevant input, or by measuring the signal output voltage. Please note that BO1 is of the non-latched type.
7. If you are using the BO1 binary output, also verify that the "BO1" LED is lit.
8. Press the **SET** push button to reset all indications and latches.
9. If you are using the BI2 binary input as the master trip, activate it and verify that the trip has occurred by repeating the steps 4 and 5.
10. Press the **SET** push button to reset all indications and latches.
11. Repeat the steps 1 through 10 for all sensors.

11.2 Testing the light and current mode

1. Check that the DIP switch settings are positioned according to your application.
2. Activate the following two things simultaneously: the camera flash within 30 cm (12 inches) of the sensor that is being tested, and the binary input used for the overcurrent condition (I>).
3. Verify that the indicator LED of the corresponding sensor channel is lit.
4. Verify that the indicator LED of the binary input is lit.
5. Verify the activation(s) of the trip relay(s) by checking the circuit breaker's status, or by monitoring the trip contact's status. The circuit breaker should open, or the contacts operate. Please note that you achieve the best test results when you operate the circuit breaker while testing.
6. Verify that the indicator LED(s) of the corresponding trip relay(s) is lit.
7. If you are using the BO1 binary output, verify its signal activation either through the status change of the relevant input, or by measuring the signal output voltage. Please note that BO1 is of the non-latched type.
8. If you are using the BO1 binary output, also verify that the "BO1" LED is lit.
9. Activate the camera flash within 30 cm (12 inches) of the sensor but do not activate the binary input used for the overcurrent condition (I>).
10. Verify that no trip has occurred and only the indicator LED of the sensor activation is lit.
11. If you are using the BO1 signal and have configured it to send light information, verify that it is activated.
12. Press the **SET** push button to reset all indications and latches.

13. If you are using a binary input as the master trip, activate it and verify that the trip has occurred by repeating the steps 5 and 6.
14. Press the **SET** push button to reset all indications and latches.
15. Repeat the steps 1 through 13 for all sensors.

11.3 Testing the CBFP function

The circuit breaker failure protection (CBFP) function is tested by taking the light signal and the additional trip criterion signal (if applicable) and leaving them active for longer than the set CBFP time (that is, 100 or 150 ms). Check that the correct outputs activated after the set delay time.

11.4 Testing the operation time

An operation time test is not required at commissioning as it is performed by the manufacturer both as a type test and as a routine production test. If you want to have more information of these tests, please refer to the routine test reports sent with the AQ-101 device and/or consult your nearest Arcteq representative for the type test reports.

However, if it is deemed necessary, you can conduct an on-site timing test with the following instructions.

1. Use a calibrated relay test set.
2. Connect one of the test set's outputs to a strong camera flash to initialize the flash and to configure the set's timer to start simultaneously with the flash.
3. Connect one of the AQ-101 device's trip outputs (T1, T2, T3, T4) to a test set input and configure the input to stop the timer.
4. Place the camera flash within 30 cm (12 inches) of the sensor.
5. Initiate the flash and the timer by using the test set output.
6. Read the measured time between the simulated arc light and the operation of the trip contact.
7. Subtract the digital input delay of the test set from the final measured time (if applicable). For specific test instructions, please consult the manufacturer of the relay test set.

11.5 Test plan example

Basic data	
Date:	
Substation:	
Switchgear:	
Serial number:	



Preconditions		Additional notes
Trip mode (channel 1):	___ L> ___ L> + I>	
Trip mode (channels 2, 3, 4):	___ L> ___ L> + I>	
BI master trip in use:	___ Yes ___ No	
CBFP in use:	___ Yes ___ No	
CBFP time setting:	___ 100 ms ___ 150 ms	

Object activated		LED active	T1, T2, T3, T4 active	BO1 active	Additional notes
Sensor channel 1	S1				
	S2				
	S3				
Sensor channel 2	S1				
	S2				
	S3				
Sensor channel 3	S1				
	S2				
	S3				
Sensor channel 4	S1				
	S2				
	S3				
Fiber sensor channel					
Binary inputs	BI1				
	BI2				

Involved personnel	
Tested by:	
Approved by:	

12 Troubleshooting

Table. 12 - 6. Troubleshooting guide for AQ-101 variants.

Problem	Possible solution(s)
The sensor does not activate during testing.	Check the sensor's cable wiring. <u>or</u> Check the testing equipment, especially the camera flash intensity (see the Testing chapter for more information).
The trip relay does not operate even when the sensor is activated.	Tripping might require overcurrent signal simultaneously with light signal. Check the DIP switch settings (see the DIP switch settings chapter for more information).

13 Technical data

13.1 Mounting and installation

Table. 13.1 - 7. Technical data for relay mounting and installation.

Panel	
Material	metal
Thickness (min...max)	1.0...5.0 mm (0.04...0.20 in)
Panel mounting	
Screw type	ISO 14581 M4x12, galvanized
Key size	Torx T20
Tightening torque (min...max)	1.5...2.0 N·m (13.3...17.7 lbf·in)
Grounding	
Nut type	DIN934-M5 galvanized
Key size	8
Tightening torque (min...max)	2.5...3.0 N·m (22.1...26.6 lbf·in)

Table. 13.1 - 8. Connector technical data (AQ-101 & AQ-101LV).

Connectors X1 and X2	
Wire cross section (min...max)	0.2...2.5 mm ² (24...13 AWG)
Minimum stripping length	7 mm (0.28 in)
Screw tightening torque (min...max)	0.5...0.6 N·m (4.4...5.3 lbf·in)

Table. 13.1 - 9. Connector technical data (AQ-101D & AQ-101DLV).

Connectors X1 and X2	
Wire cross section (min...max)	0.34...2.5 mm ² (24...12 AWG)
Minimum stripping length	10 mm (0.39 in)
Screw tightening torque (min...max)	0.5...0.6 N·m (4.4...5.3 lbf·in)
Fiber connectors	
Nut tightening torque	light finger tightening

13.2 Operating times

Table. 13.2 - 10. Technical data for relay operating times.

Trip relay operation delay	7 ms*
Reset time (arc light stage)	2 ms

*) The total trip time when using both the arc light (L>) or phase/residual overcurrent (I>) from an AQ-110 device and the arc light (L>) from this device.

13.3 Auxiliary voltage

Table. 13.3 - 11. Technical data for the relay auxiliary voltage (Uaux).

Auxiliary power supply	92...265 V AC/DC 18...72 V DC (optional)
Maximum power consumption	5 W, < 10 mΩ
Standby current	90 mA
Start-up inrush current	<150 ms (110 V DC) <600 ms (24 V DC)

13.4 Binary inputs

Table. 13.4 - 12. Technical data for the binary inputs (BI1, BI2).

Nominal voltage	24 V DC <u>or</u> 110 V DC <u>or</u> 220 V DC
Threshold: - pick-up - drop-off	Approximately 16 V DC <u>or</u> 88 V DC <u>or</u> 178 V DC Approximately 15 V DC <u>or</u> 75 V DC <u>or</u> 155 V DC
Rated current	3 mA
Number of inputs	2

13.5 Trip relays

Table. 13.5 - 13. Technical data for the trip relays (T1, T2, T3, T4).

Number of trip relays	4 NO <u>or</u> 3 NO + 1 NC
Voltage withstand	250 V AC/DC
Carry: - continuous carry - make-and-carry for 3 s - make-and-carry for 0.5 s	5 A 16 A 30 A
Breaking capacity DC*	40 W (0.36 A at 110 V DC)

Contact material	AgNi 90/10
------------------	------------

*) When the time constant L/R = 40 ms.

13.6 Binary output(s)

Table. 13.6 - 14. Technical data for the binary output (BO1).

Number of outputs	1
Rated voltage	+24 V DC (internal power supply)
Rated current (max.)	20 mA

13.7 System failure relay

Table. 13.7 - 15. Technical data for the system failure relay (SF).

Number of SF relays	1
Rated voltage	250 V AC/DC
Carry: - continuous carry - make-and-carry for 3 s - make-and-carry for 0.5 s	5 A 16 A 30 A
Breaking capacity DC*	40 W (0.36 A at 110 V DC)
Contact material	AgNi 90/10

*) When the time constant L/R = 40 ms.

13.8 Point sensors

AQ-01 point sensor

Table. 13.8 - 16. Technical data for the AQ-01 light point sensor.

Light intensity threshold	8,000 lux 25,000 lux 50,000 lux
Detection radius	180°
Mechanical protection	IP 20
Sensor cable specification	Shielded twisted pair 0.75 mm ² (AWG: 18)
Maximum sensor cable length (per channel)	200 m
Operating temperature	-20...+85 °C

AQ-02 point sensor

Table. 13.8 - 17. Technical data for the AQ-02 light and pressure point sensor.

Light intensity threshold	8,000 lux 25,000 lux 50,000 lux
Pressure threshold (fixed)	0.2 bar above ambient pressure
Pressure measuring accuracy	±1.8 % (of full scale)
Detection radius	180°
Mechanical protection	IP 20
Sensor cable specification	Shielded twisted pair 0.75 mm ² (AWG: 18)
Maximum sensor cable length (per channel)	200 m
Operating temperature	−20...+85 °C

13.9 Fiber optic loop sensors

AQ-06 fiber optic loop sensor

Table. 13.9 - 18. Technical data for the AQ-06 fiber optic loop sensor.

Material	Plastic fiber
Light intensity threshold	8,000 lux
Cable length (min...max)	3...40 m
Cable diameter	1.0 mm
Detection radius	360°
Bending radius	5 cm
Operating temperature	−40...+85 °C

AQ-07 fiber optic loop sensor

Table. 13.9 - 19. Technical data for the AQ-07 fiber optic loop sensor.

Material	Covered glass fiber
Light intensity threshold	8,000 lux
Cable length (min...max)	3...50 m
Cable diameter	1.2 mm
Detection radius	360°

Bending radius	1 cm
Operating temperature	−40...+85 °C

AQ-08 fiber optic loop sensor

Table. 13.9 - 20. Technical data for the AQ-08 fiber optic loop sensor.

Material	Covered glass fiber
Light intensity threshold	8,000 lux
Cable length (min...max)	3...15 m
Cable diameter	1.2 mm
Detection radius	360°
Bending radius	1 cm
Operating temperature	−40...+125 °C

13.10 Disturbance tests

Table. 13.10 - 21. Technical data for the disturbance tests.

Electromagnetic compatibility test	CE-approved and tested according to EN 50081-2 and EN 50082-2
Conducted emission (EN 55011, class A)	0.15...30.00 Hz
Radiated emission (EN 55011, class A)	30.00...1,000.00 MHz
Electrostatic discharge immunity (IEC 244-222 and EN 61000-4-2, level 4)	Air discharge: 15 kV Contact discharge: 8 kV
Electrical fast transients (EN 61000-4-4, class III & IEC 801-4, level 4)	Power supply input: 4 kV, 5/50 ns Other inputs and outputs: 4 kV, 5/50 ns
Surge immunity (EN 61000-4-5, level 4)	Between wires: 2 kV, 1.2/50 µs Between wire and earth: 4 kV, 1.2/50 µs
RF electromagnetic field (EN 61000-4-3, level 3)	f = 80...1,000 MHz, 10 V/m
Conducted RF field (EN 61000-4-6, level 3)	f = 150 kHz...80 MHz, 10 V/m

13.11 Voltage tests

Table. 13.11 - 22. Technical data for the voltage tests.

Insulation test voltage (IEC 60255-5)	2 kV, 50 Hz, 1 min
---------------------------------------	--------------------

Impulse test voltage (IEC 60255-5)	5 kV, 1.2/50 μ s, 0.5 J
------------------------------------	-----------------------------

13.12 Mechanical tests

Table. 13.12 - 23. Technical data for the mechanical tests.

Vibration test	2...13.2 Hz ($\pm$ 3.5 mm) 13.2...100 Hz ($\pm$ 1.0 g)
Shock/bump test (IEC 60255-21-2)	20 g and 1,000 bumps/dir.

13.13 Environmental conditions

Table. 13.13 - 24. Technical data for the environmental conditions.

Specified ambient service temperature	–35...+70 °C
Transportation and storage temperature	–40...+70 °C
Relative humidity	Up to 97 %
Altitude	Up to 2,000 m above sea level

13.14 Casing

Table. 13.14 - 25. Technical data for the device casing.

Protection: - front - back	IP 50 IP 20
Device dimensions (W × H × D)	50 × 157 × 160 mm 145 × 109 × 34 mm (the DIN rail variant)
Weight	0.7 kg

14 Ordering information

AQ-101 point sensor device (panel mounted)

AQ-101 - X X X X

Auxiliary power supply

- A 92...265 V AC/DC
- B 18...72 V DC

T3 trip relay setting

- A Normally open (NO)
- B Normally closed (NC), or Electronic lock-out

Additional sensor channel (S5)

- A None
- B Fiber optic sensor channel

Binary input threshold voltage

- A 24 V DC
- B 110 V DC
- C 220 V DC

AQ-101D point sensor device (DIN rail mounted)

AQ-101D - X X X X

Auxiliary power supply

- A 92...265 V AC/DC
- B 18...72 V DC

T3 trip relay setting

- A Normally open (NO)
- B Normally closed (NC), or Electronic lock-out


Additional sensor channel (S5)

- A None
- B Fiber optic sensor channel


Binary input threshold voltage

- A 24 V DC
- B 110 V DC
- C 220 V DC

AQ-0x point sensors

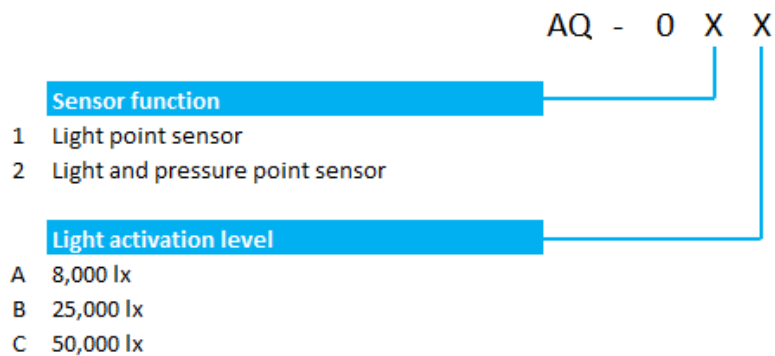

AQ-0x fiber optic loop sensors

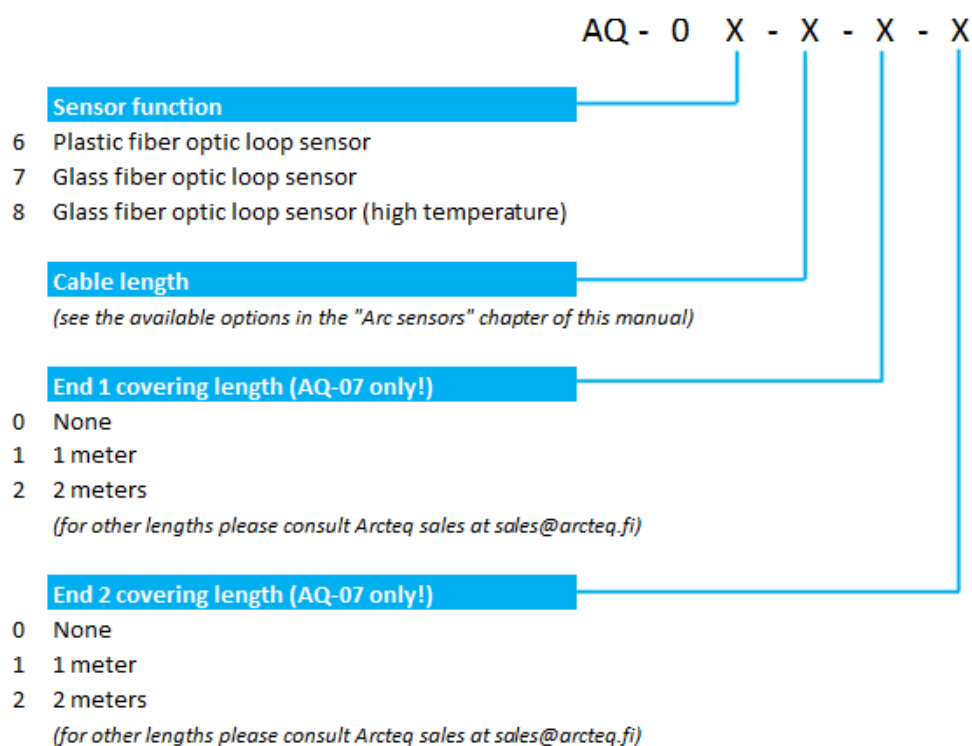

Accessories

Order code	Description	Note	Manufacturer
AX006	Wall mounting bracket	For AQ-103 and AQ-110x variants (MV and LV).	Arcteq Relays Ltd.
AX016	Wall mounting bracket	For AQ-101, AQ-101S and AQ-102 devices (MV and LV).	Arcteq Relays Ltd.
AX033	Sensor bracket	For point sensors (AQ-01 and AQ-02).	Arcteq Relays Ltd.
• AX029-3 • AX029-7 • AX029-14	Point sensor connecting cable	The final part (-3/-7/-14) of the code determines the length of the cable: 3 meters, 7 meters, or 14 meters, respectively.	Arcteq Relays Ltd.

15 Contact and reference information

Manufacturer

Arcteq Relays Ltd.

Visiting and postal address

Kvartsikatu 2 A 1
65300 Vaasa, Finland

Contacts

Phone:	+358 10 3221 370
Website:	arcteq.com
Technical support:	support.arcteq.fi +358 10 3221 388 (EET 9:00 – 17.00)
E-mail (sales):	sales@arcteq.com