AQ-110P SS:2a

SS:2a		OUTPUTS						
		T1	T2	T3	BO1	HSO1	HSO2	AQD
INPUTS	S1	x[1]	x[1]	CBFP[1]			CBFP[1]	
	S2	x[1]	x[1]	x[1]			x[1]	x[2]
	S3,S4,S5	x[1]	CBFP[1]	x[1]			x[1]	x[2]
	Iext> (BI2)	x[1]	CBFP[1]	x[1]			x[1]	x[2]
	Iext> (BI1)					x		
	I> (phase currents)				x	x		
	Io> (residual current)				x	x		

1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, Io> or BI1) is ON.
2) Activates only if phase overcurrent signal (I>) is ON.

AQ-101 SS:4

SS:4		OUTPUTS		
		T1	T2	BO1
INPUTS	S1	x[1]		CBFP
	S2		x[1]	CBFP
	S3, S4, S5			x
	Master Trip (BI2)	x	x	

1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

AQ-101 SS:5

SS:5		OUTPUTS		
		T3	BO1	BO3
INPUTS	S1	x[1]	x	
	S2	x[1]	x	x
	S3	x[1]		x
	S4	x[1]		x
	BI1 MT Incomer 1	x[2]		
	BI2 MT Incomer 2	x[2]		
	BI3 I> Incomer 1			
	BI4 I> Incomer 2			
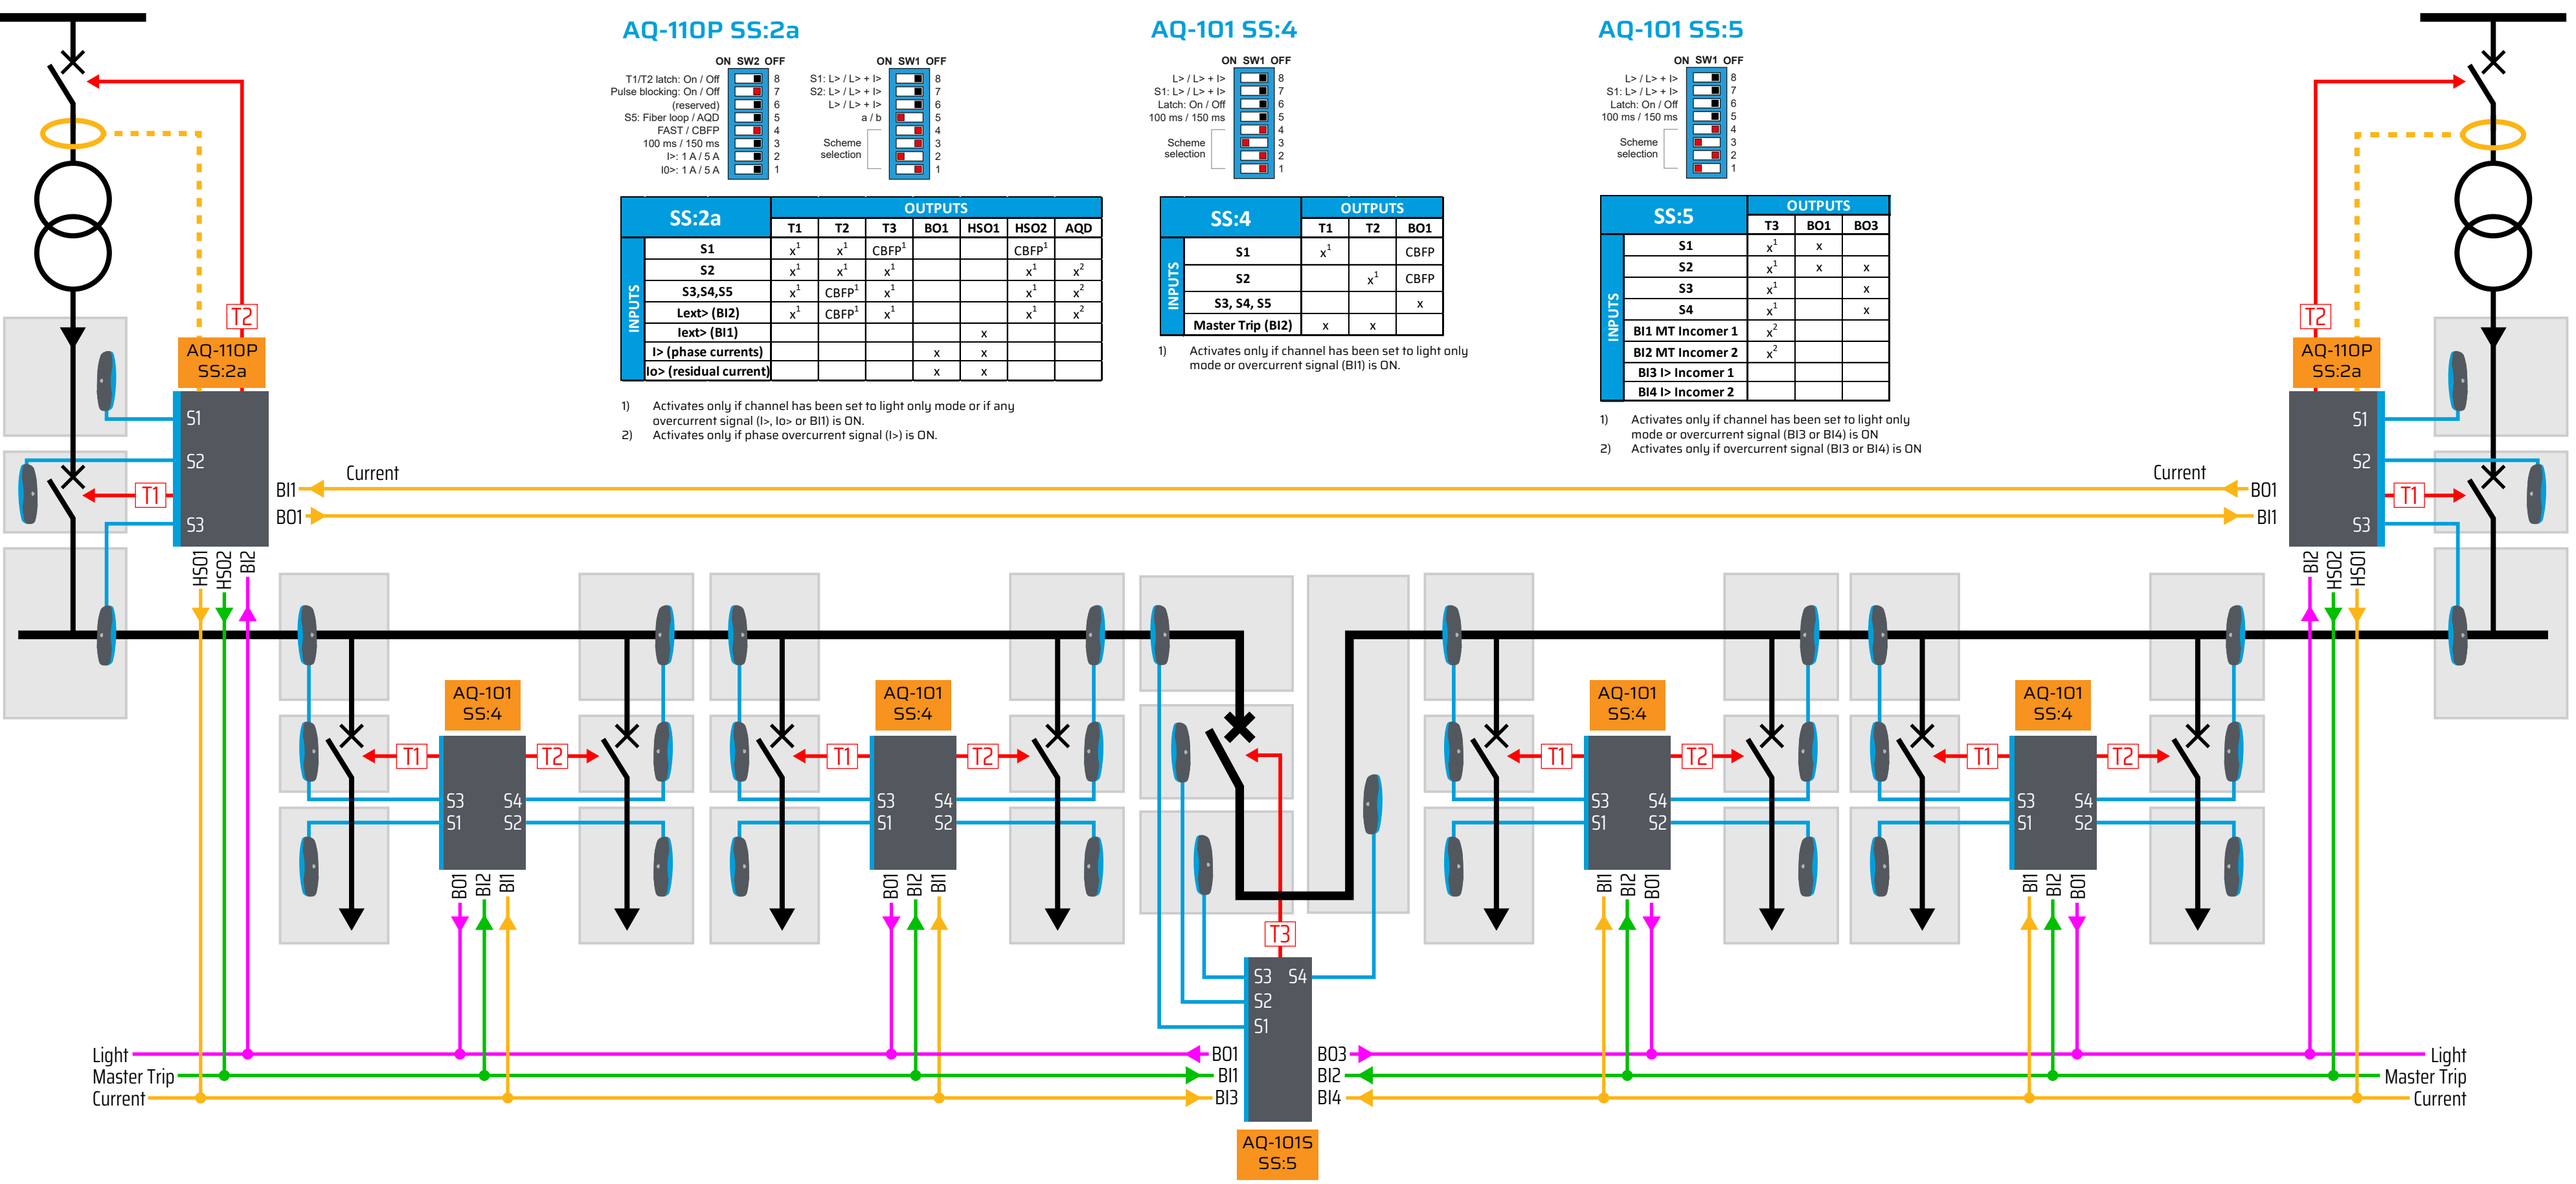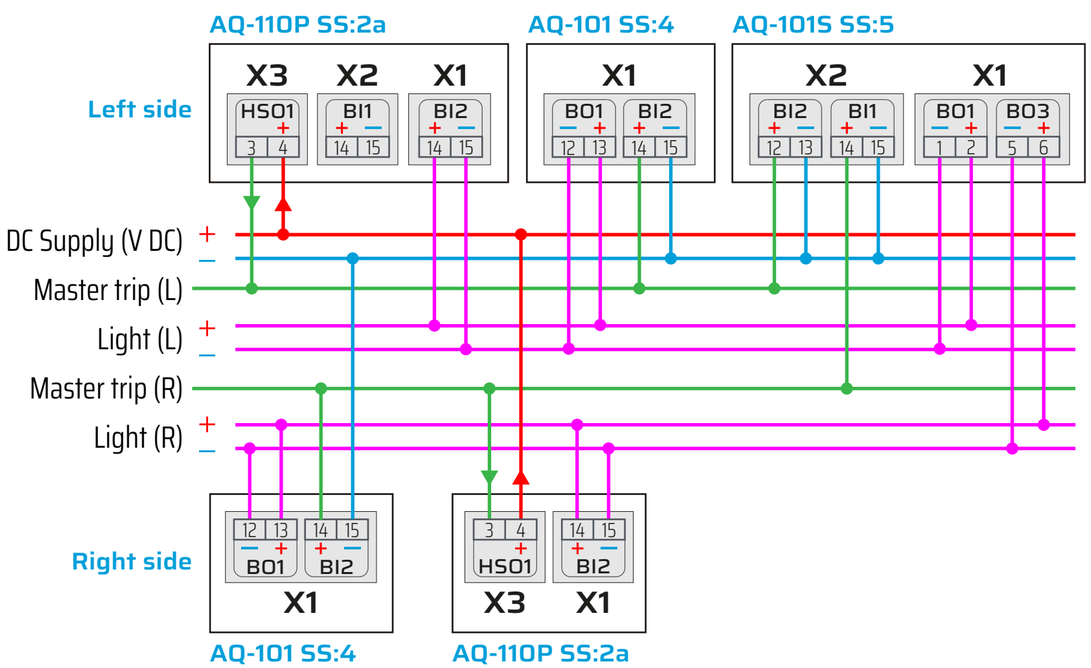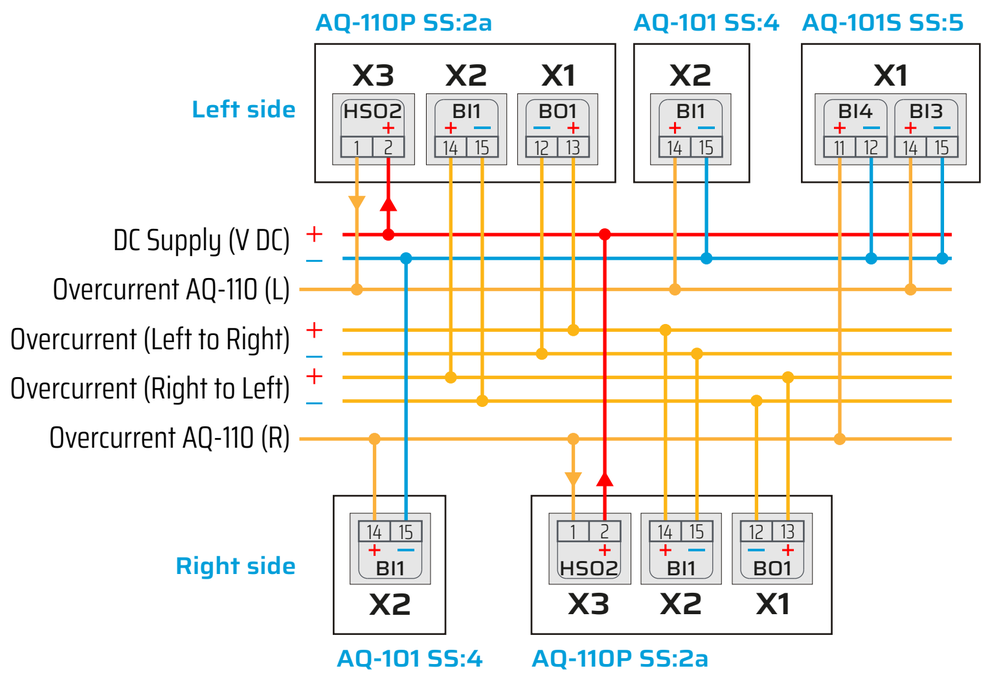
1) Activates only if channel has been set to light only mode or overcurrent signal (BI3 or BI4) is ON
2) Activates only if overcurrent signal (BI3 or BI4) is ON