DI CARDS (B)

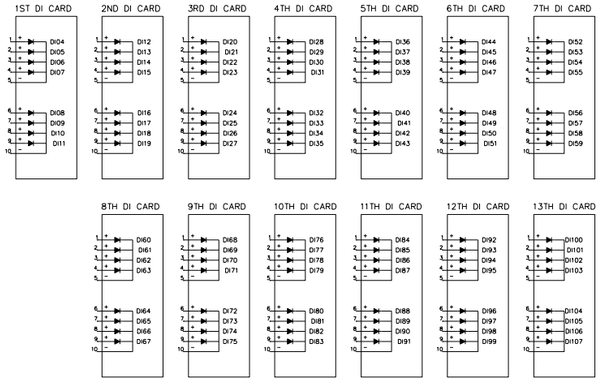

DO CARDS (C)

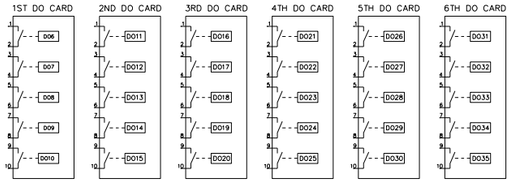

HSO CARDS (R)

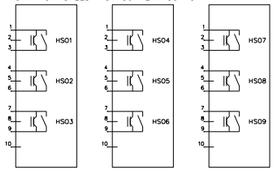

RTD CARDS (F)

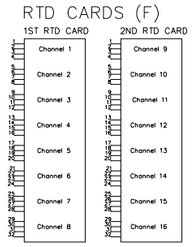

mA OUTPUT (I)

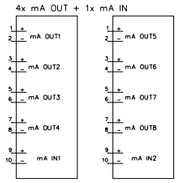

mA INPUT (T)

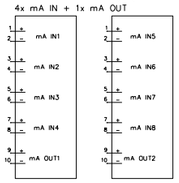

COMMUNICATION CARDS

RS-232 (L, M, N, O)



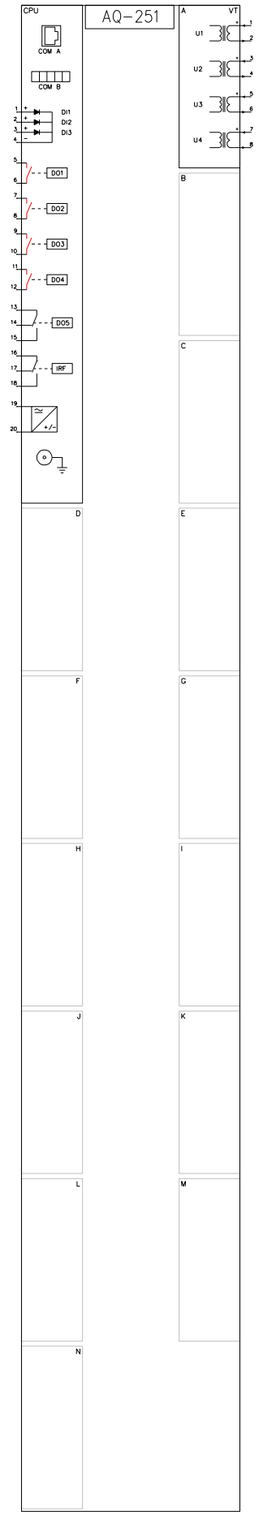

To keep the DI signal numbering correct (DI4...11 -> DI12...19 etc.) drag the cards starting from the first.

To keep the DO signal numbering correct (DO6...10 -> DO11...15 etc.) drag the cards starting from the first.
MAX 6 pcs per device.

RTD & Thermocoupler:
Channels 1-8
Takes 1 option card slot
MAX 2 cards per device.
Connections in device manual

Milliampere output (I) & input (T) cards.
Takes 1 option card slot
MAX 2 cards per device.
Connections in device manual

Communication cards.
Takes 1 option card slot
MAX 1 card per device,
except SFP card.
Connections in device manual

DI CARDS (B)

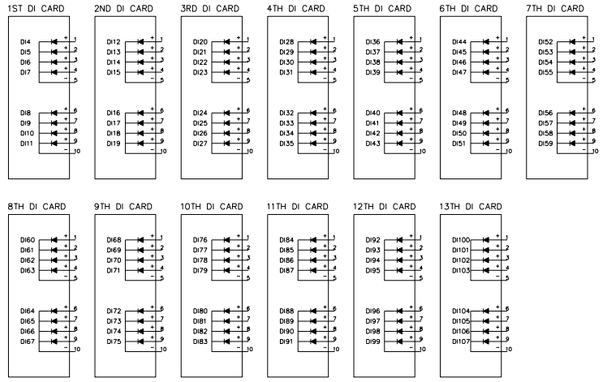

DO CARDS (C)

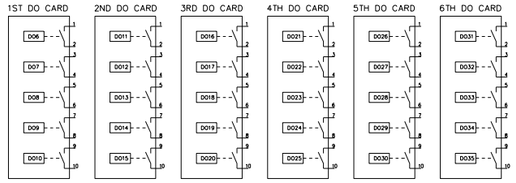

RTD CARDS (F)

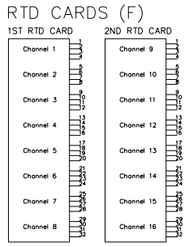

HSO:
MAX 3 per device.
Takes 1 option card slot
Connections in device manual

HSO CARDS (R)

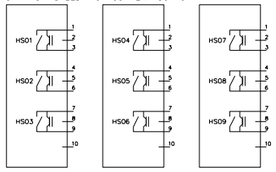

mA OUTPUT (I)

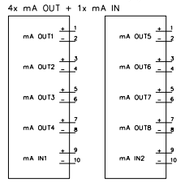

mA INPUT (T)

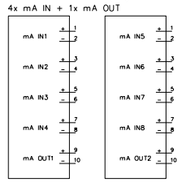

COMMUNICATION CARDS

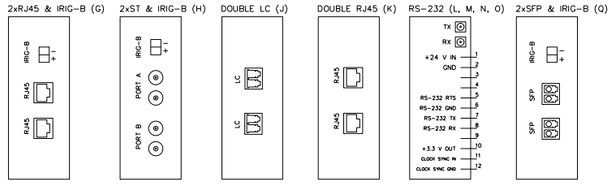

MAX 4 PER DEVICE