



AQ-110P SS:2a

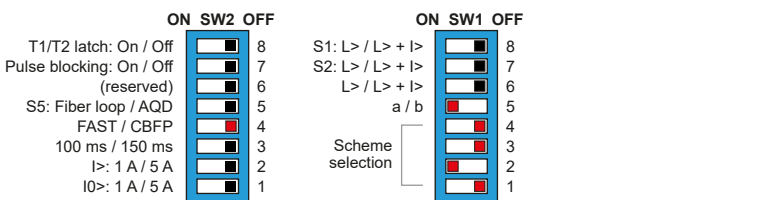

SS:2a	T1	T2	T3	BO1	HSO1	HSO2	AQD
S1	x ¹	x ¹	CBFP ¹			CBFP ¹	
S2	x ¹	x ¹	x ¹			x ¹	x ²
S3,S4,S5	x ¹	CBFP ¹	x ¹			x ¹	x ²
Lex> (BI2)	x ¹	CBFP ¹	x ¹			x ¹	x ²
lex> (BI1)					x		
I> (phase currents)				x	x		
IO> (residual current)				x	x		

- 1) Activates only if channel has been set to light only mode or if any overcurrent signal (I>, IO> or BI1) is ON.
- 2) Activates only if phase overcurrent signal (I>) is ON.


AQ-101 SS:1

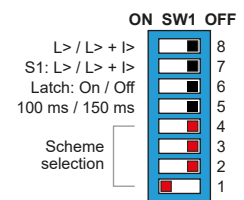

SS:1	T1	BO1
S1	x ¹	CBFP
S2 - S5		x
Master Trip (BI2)	x	


- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI1) is ON.

AQ-110P SS:5

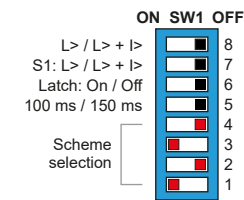

SS:5	T3	BO1	BO3
S1	x ¹	x	
S2	x ¹	x	x
S3	x ¹		x
S4	x ¹		x
BI1 MT Incomer 1	x ²		
BI2 MT Incomer 2	x ²		
BI3 I> Incomer 1			
BI4 I> Incomer 2			

- 1) Activates only if channel has been set to light only mode or overcurrent signal (BI3 or BI4) is ON
- 2) Activates only if overcurrent signal (BI3 or BI4) is ON

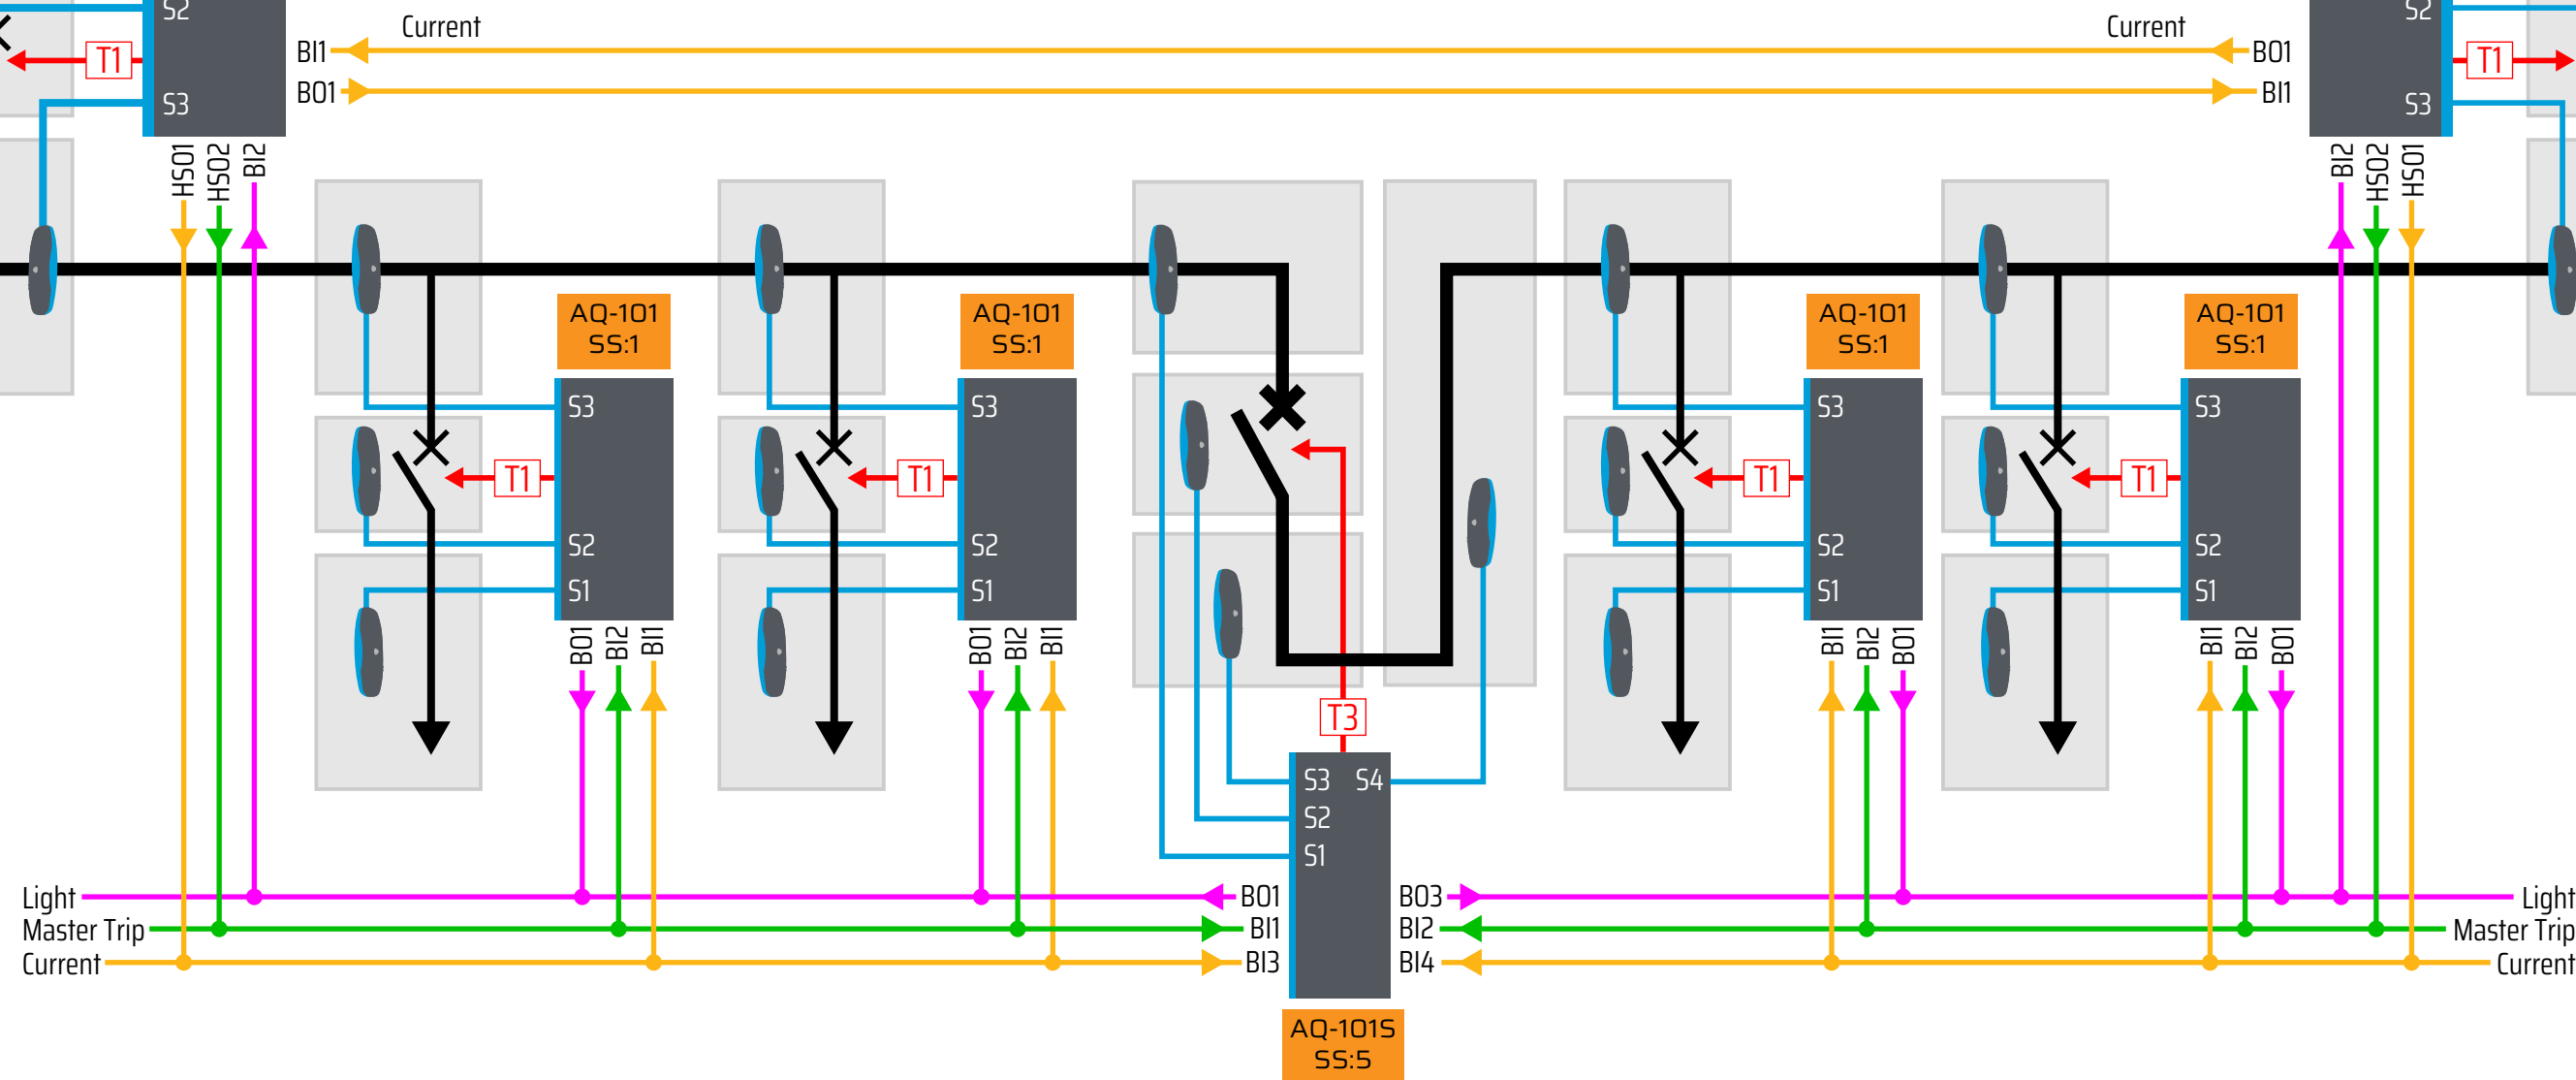

AQ-110P SS:2a

Left side

DC Supply (V DC)


Overcurrent AQ-110 (L)

Overcurrent (Left to Right)

Overcurrent (Right to Left)

Overcurrent AQ-110 (R)

Right side

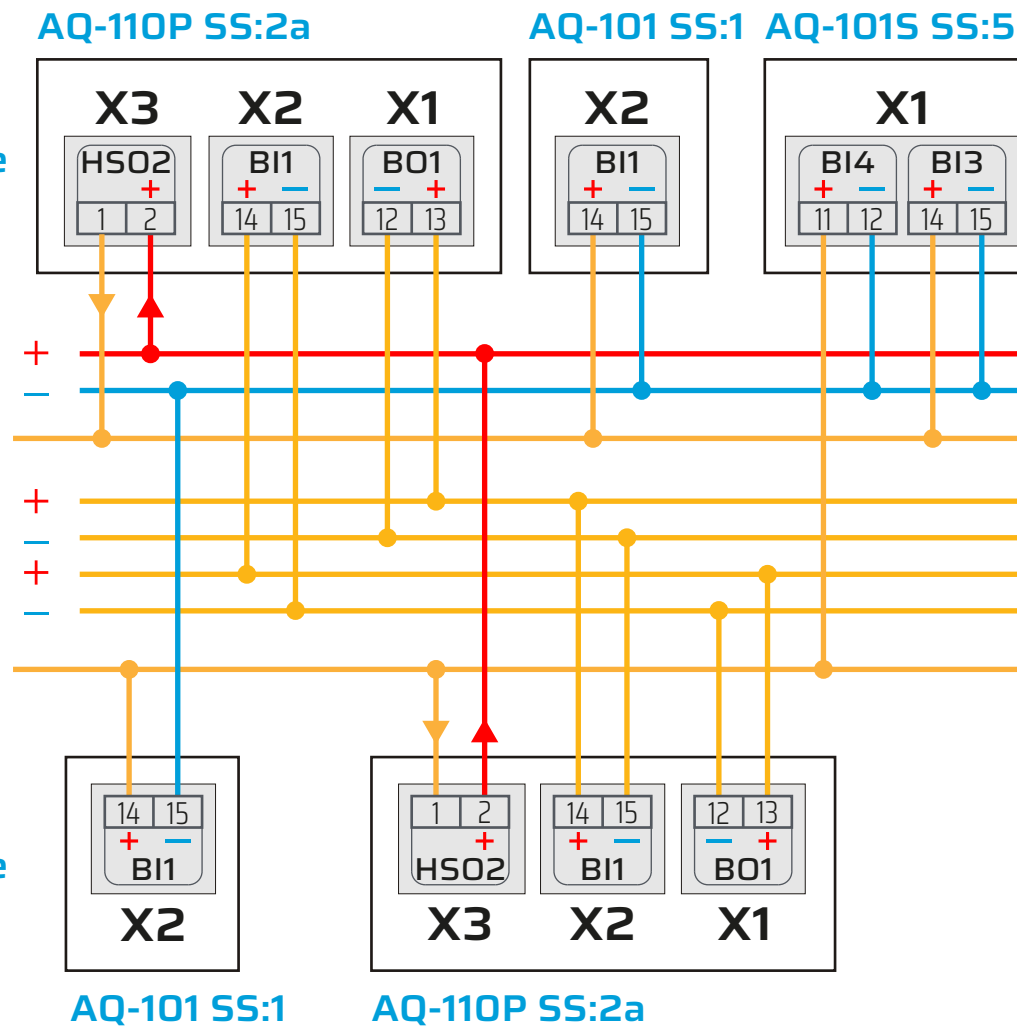

AQ-110P SS:2a

Left side

DC Supply (V DC)

Master trip (L)

Light (L)

Master trip (R)

Light (R)

Right side

